




COMPATIBILITY: QTV
IRV / VLV
NI
DA
FBLV
FCMV
FMEV

050
051
052
054
053
055
056
057
058
112
116
117
118
119
150



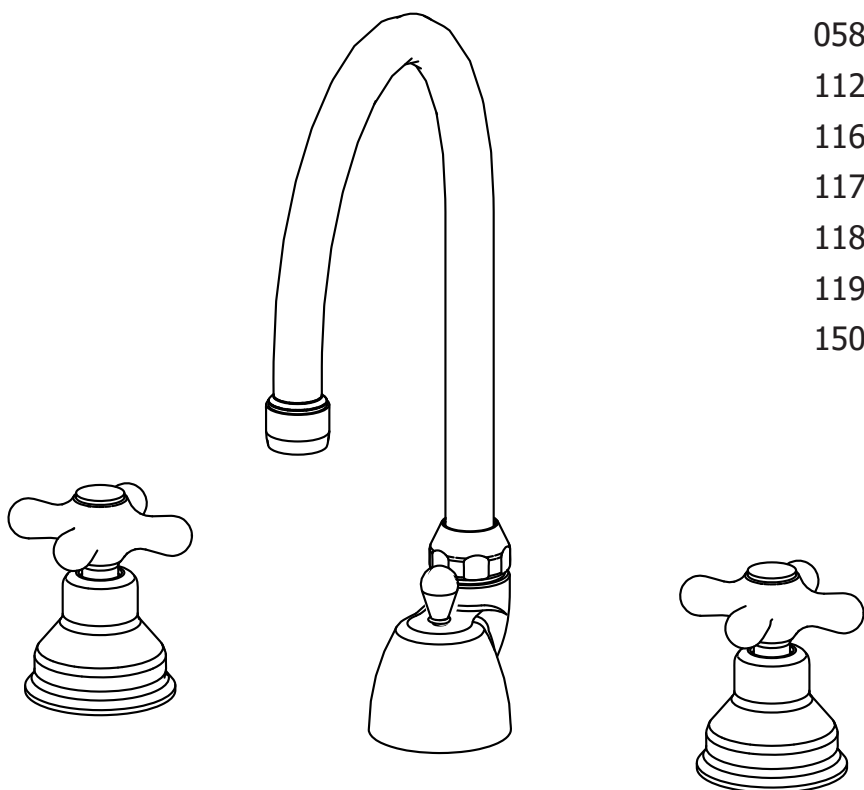


1

Montaggio Assembly

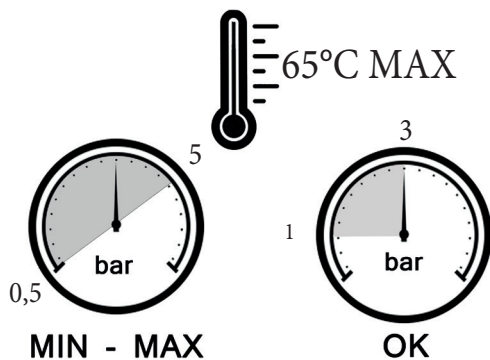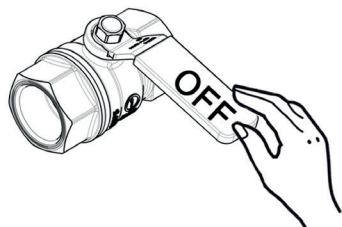


2

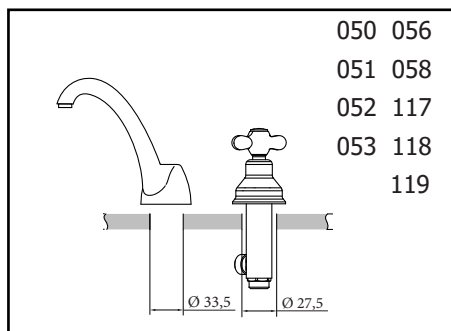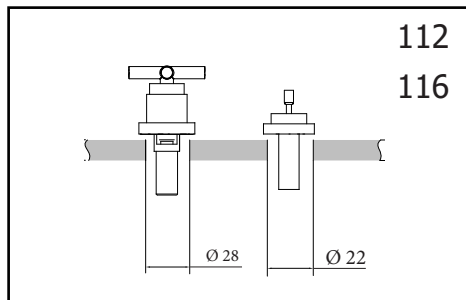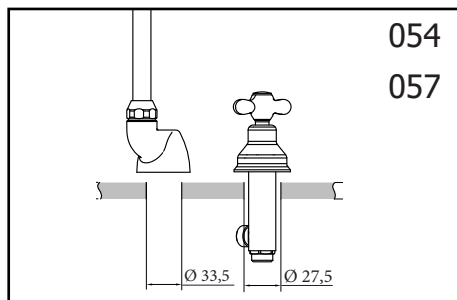


3

a

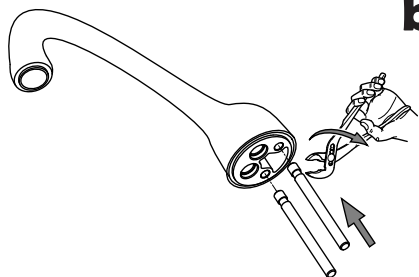

b

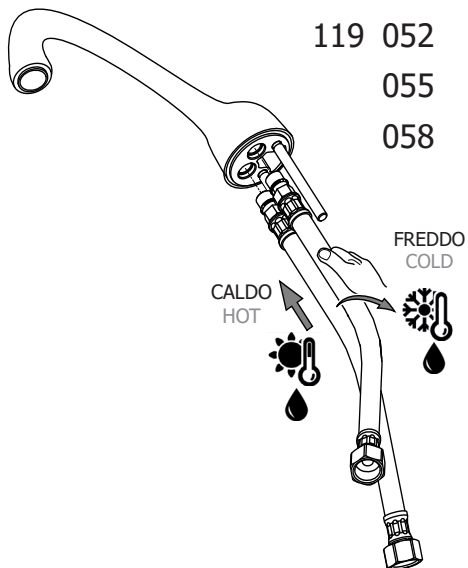

117 050

118 051


119 052

055


058

4

a

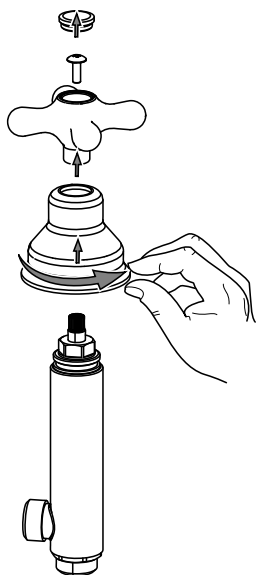

b

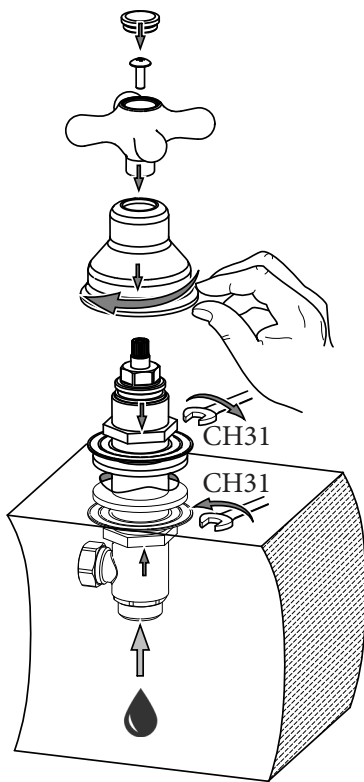

050

051

052

053

054

055

056

057

058


117

118

119

5

a

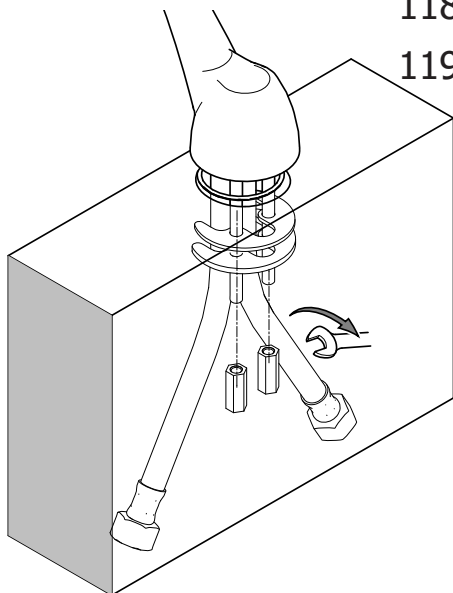

117 050

118 051

119 052

054


055


057

058


150

b

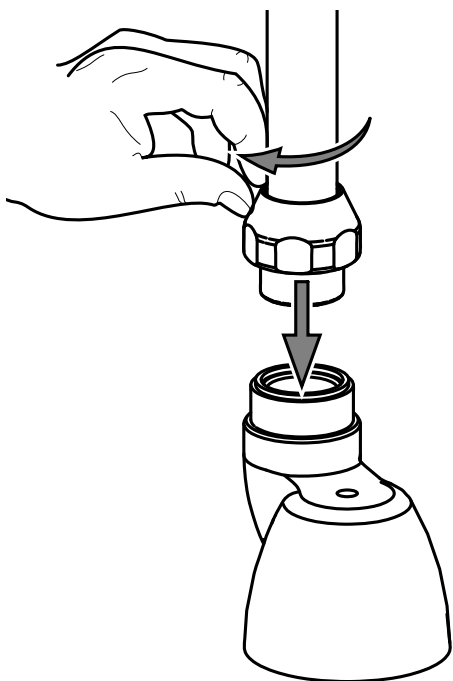

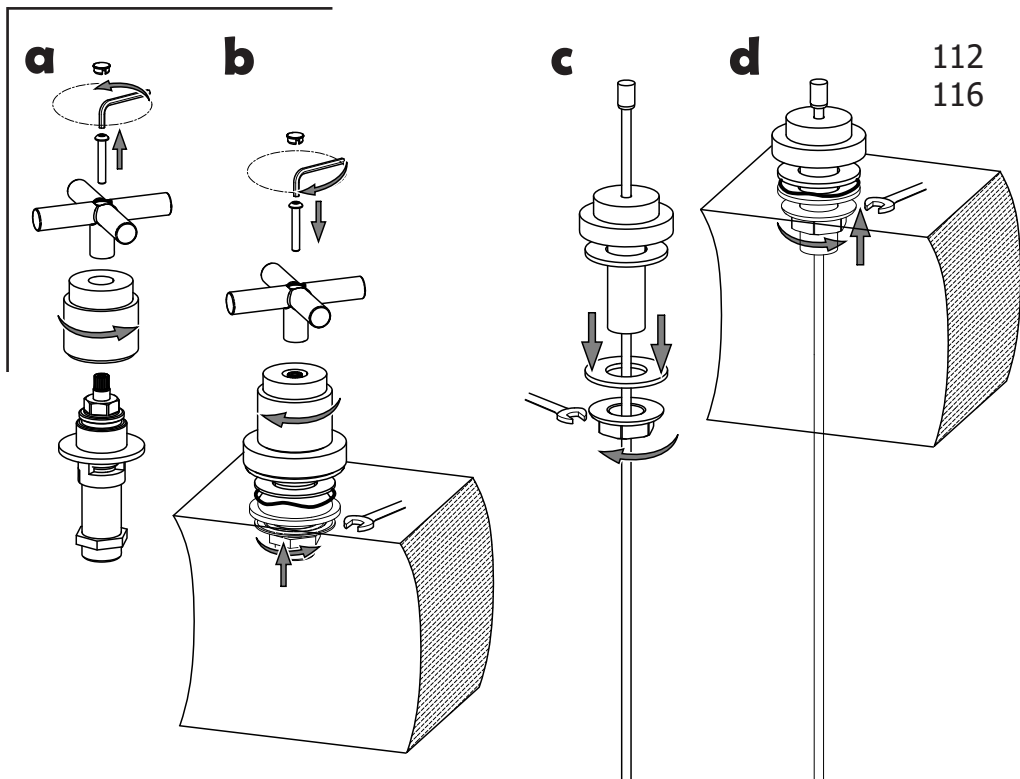


C Collegamenti Connection

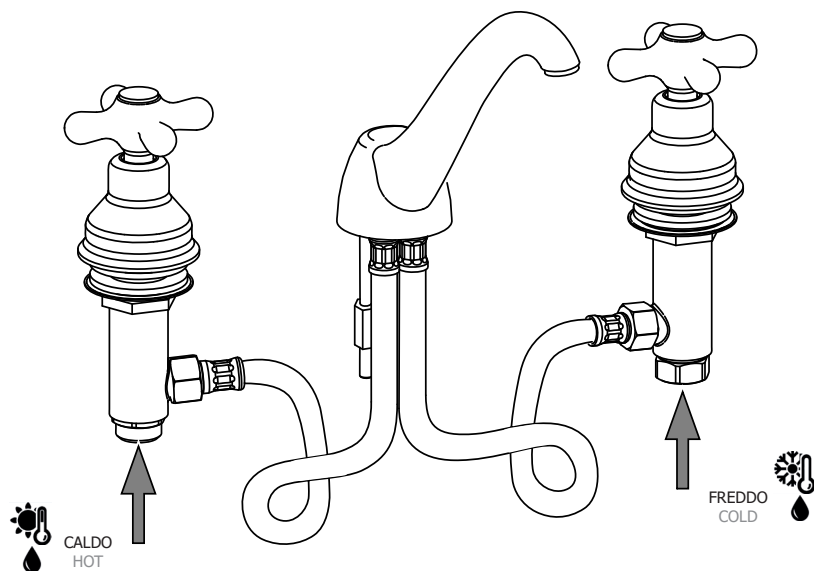


6

056
057
058
050
054
055
057
112
116
117
118
119

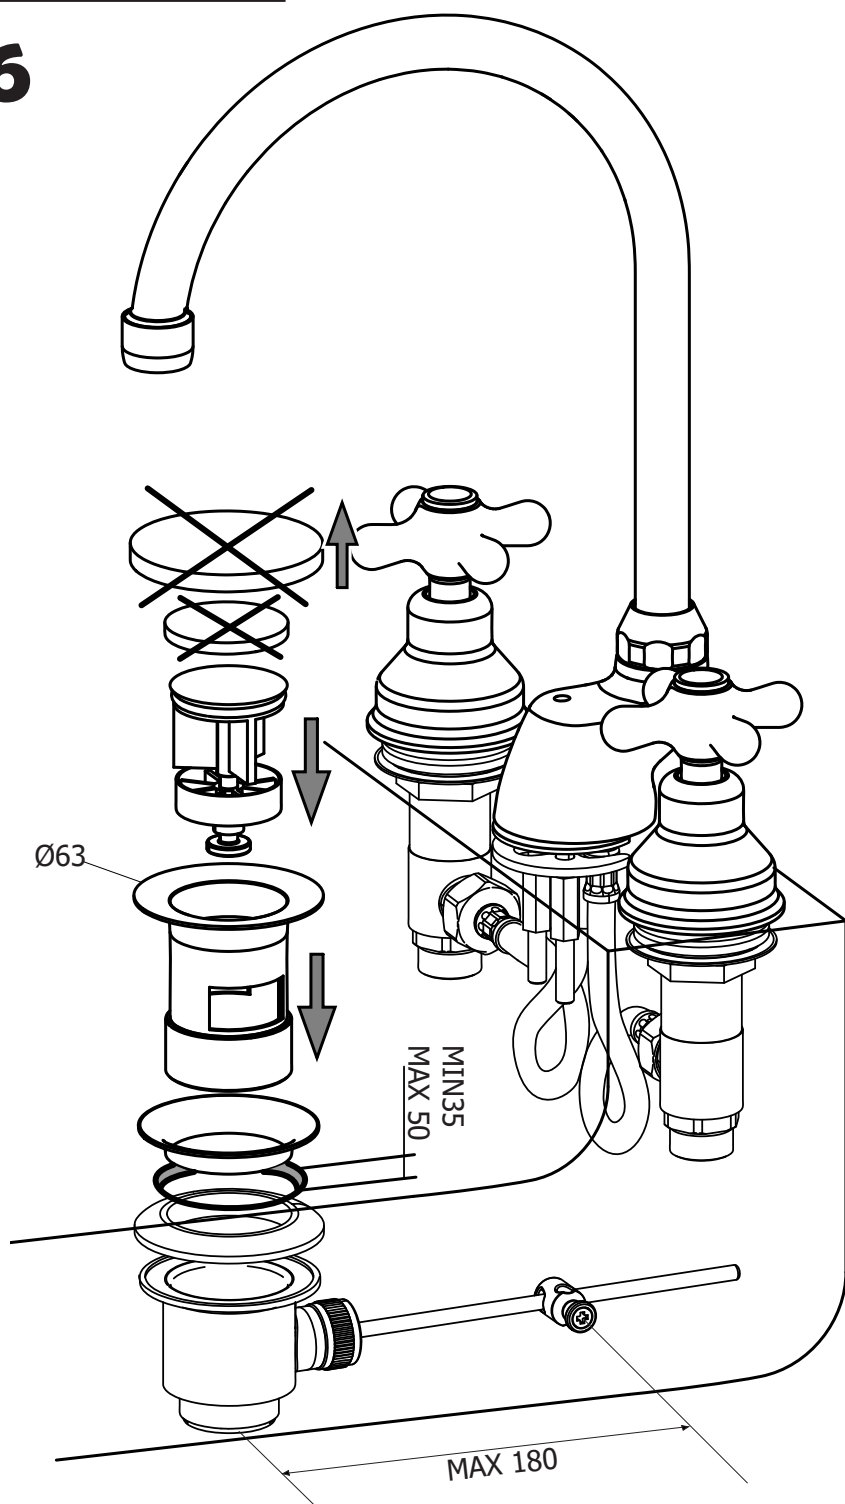


7

056
057
058
050
054
055
057
112
116
117
118
119

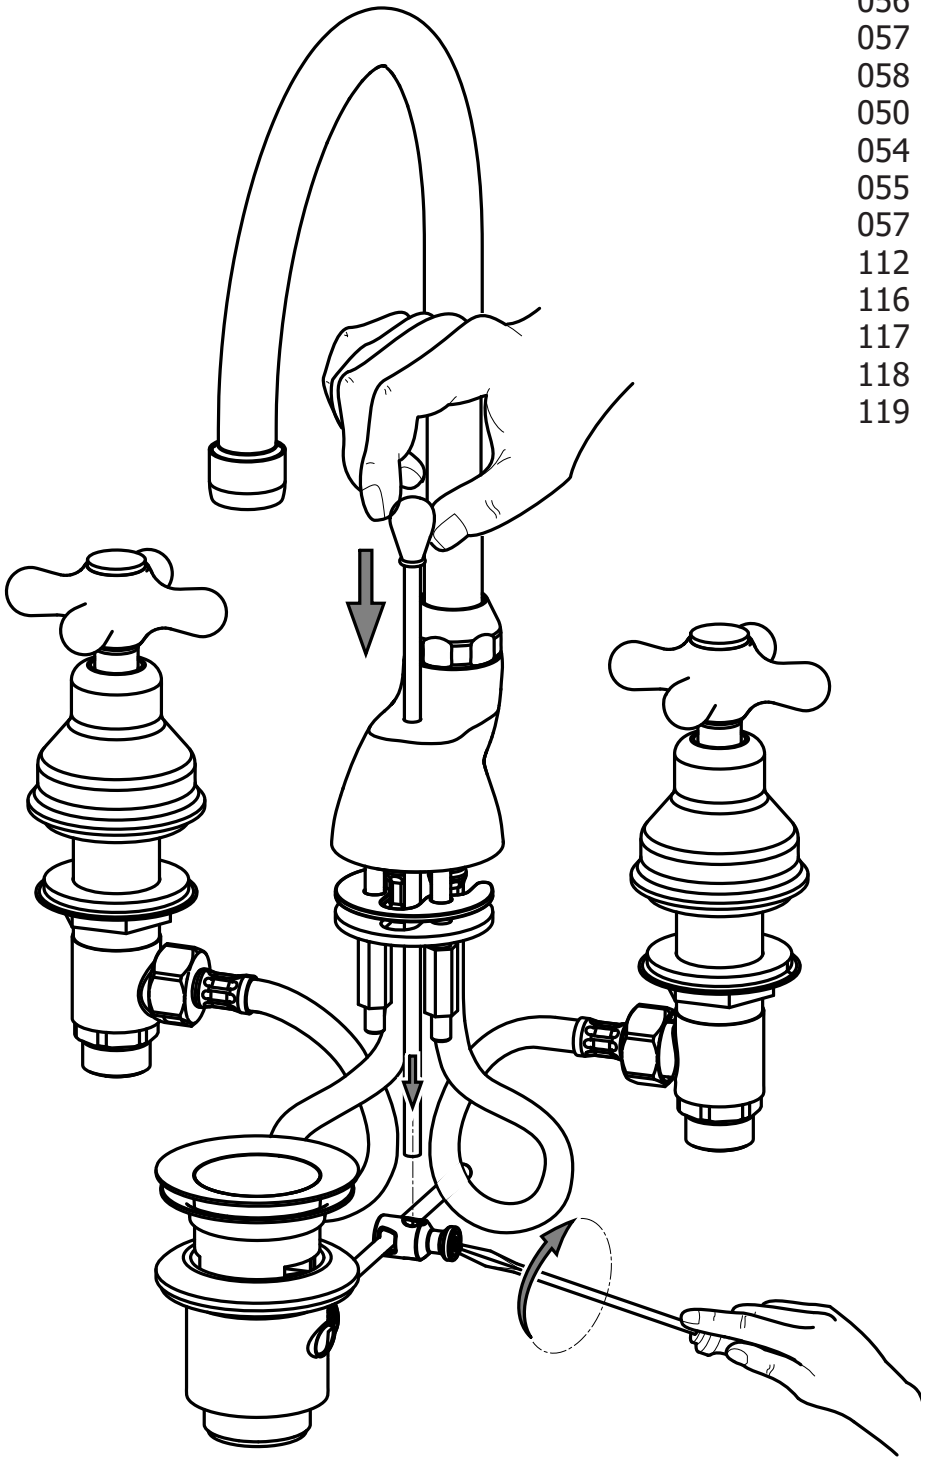


M Manutenzione Service

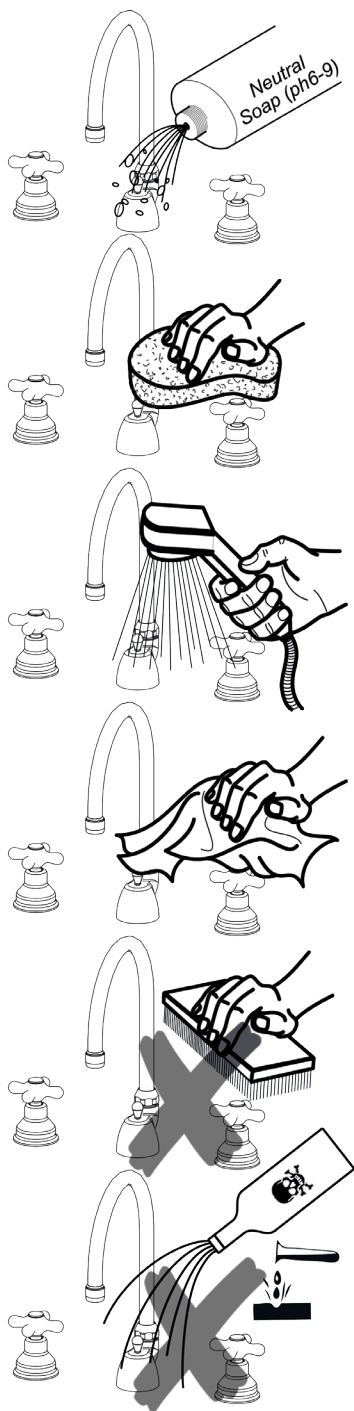


S Sostituzione Vitone Ceramico How to replace Ceramic Disc Valve

a

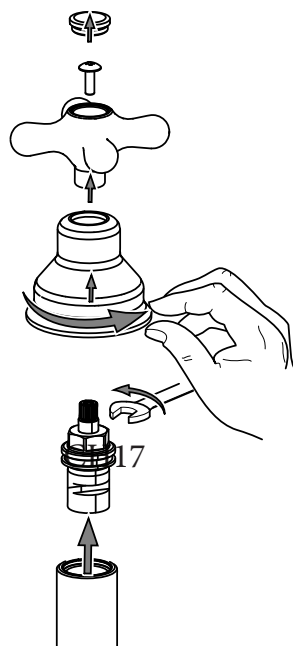

b Sostituzione Snodo How to replace Joint

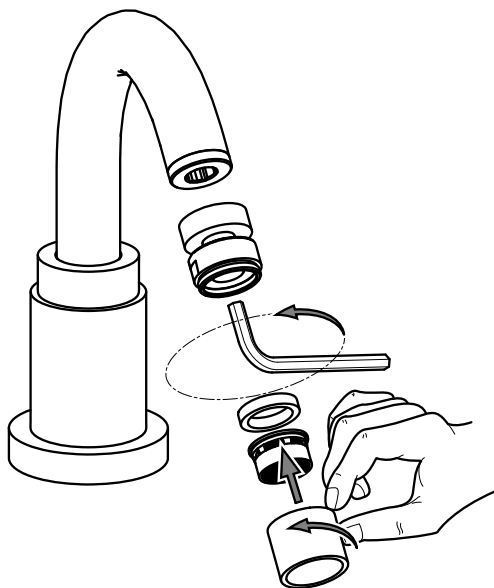

c Sostituzione Aeratore How to replace Aerator