

JO

JK

JL

071..

071K..

075..

081..


081K..

085..

131..

131K..

135..

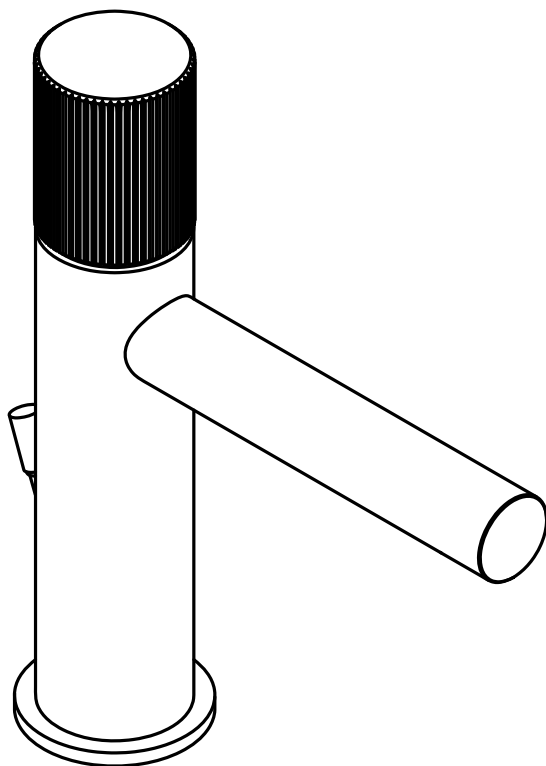



ITALIANO

- L'installazione deve essere eseguita in conformità alle presenti istruzioni, alle norme edilizie e di sicurezza vigenti e a quelle relative agli impianti idraulici.
- Controllare il prodotto installato ad intervalli regolari per assicurarsi che non ci siano perdite o parti instabili.
- Tenere fuori dalla portata dei bambini. Alcune piccole componenti potrebbero essere ingerite.

ENGLISH

- The installation must be carried out in compliance with current manual, building and safety regulations, as well as with the applicable plumbing standards. All required safety precautions must be observed.
- Periodically inspect the installed product to ensure there are no leaks or unstable parts, and take immediate action if any irregularities are detected.
- Keep out of reach of children. Small pieces that can be a choking hazard for young children.

**In caso di necessità contattare /
In case of need contact:**

Rubinetteria Paffoni S.p.A.
Via Soriso, 2
28076 - Pogno (NO)
Tel. +39 0322 97321/2
email: ufficio.tecnico@paffoni.it




Gestione imballaggi
inquadrare il QR code
Packaging disposal
scan the QR code

1

Montaggio
Assembly

EN1717

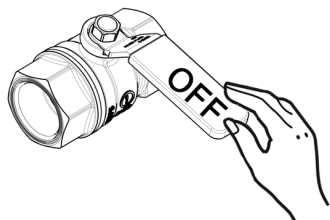

Prima di chiudere
il muro eseguire lo
spurgo e la prova di
pressione

Before concluding
the wall finishing
operation make pur-
ge and
pressure test



$65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$




MIN - MAX




OK

2


a

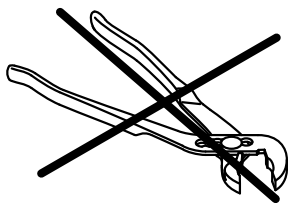

071 071K 075
081 081K 085
131 131K 135

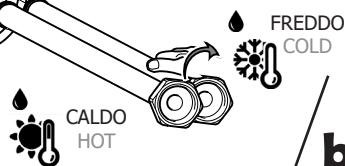


b

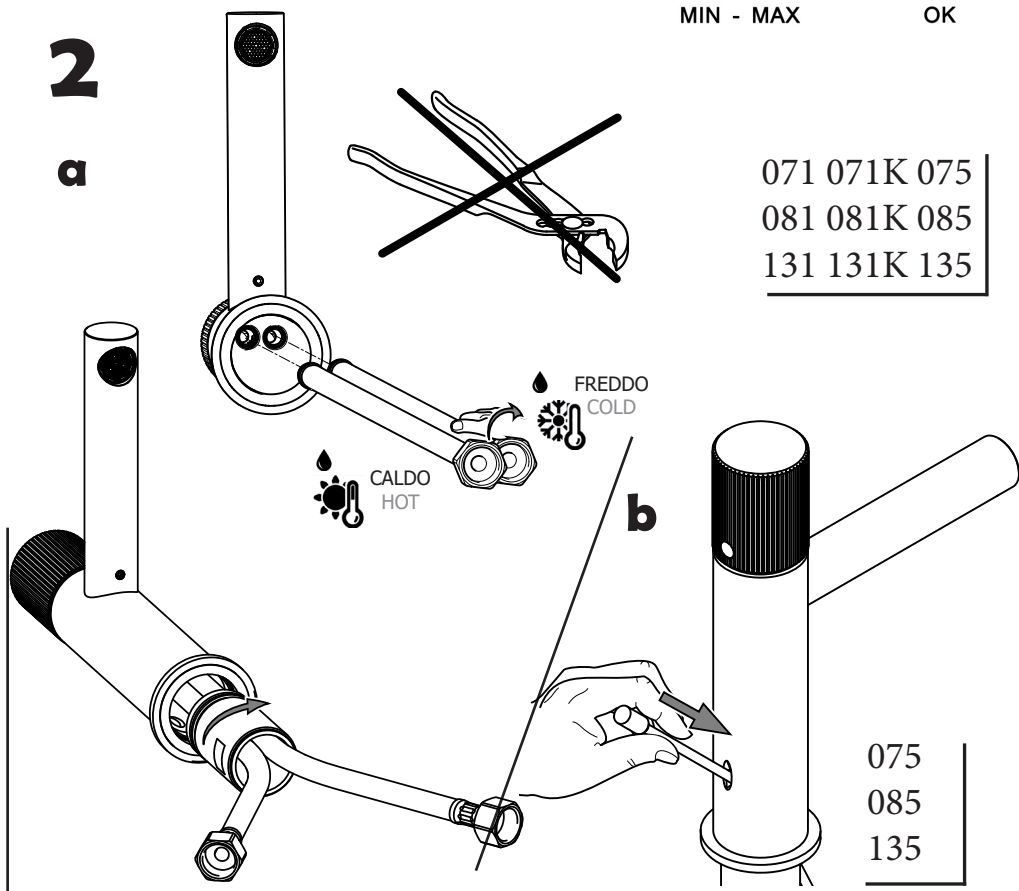


075
085
135

c

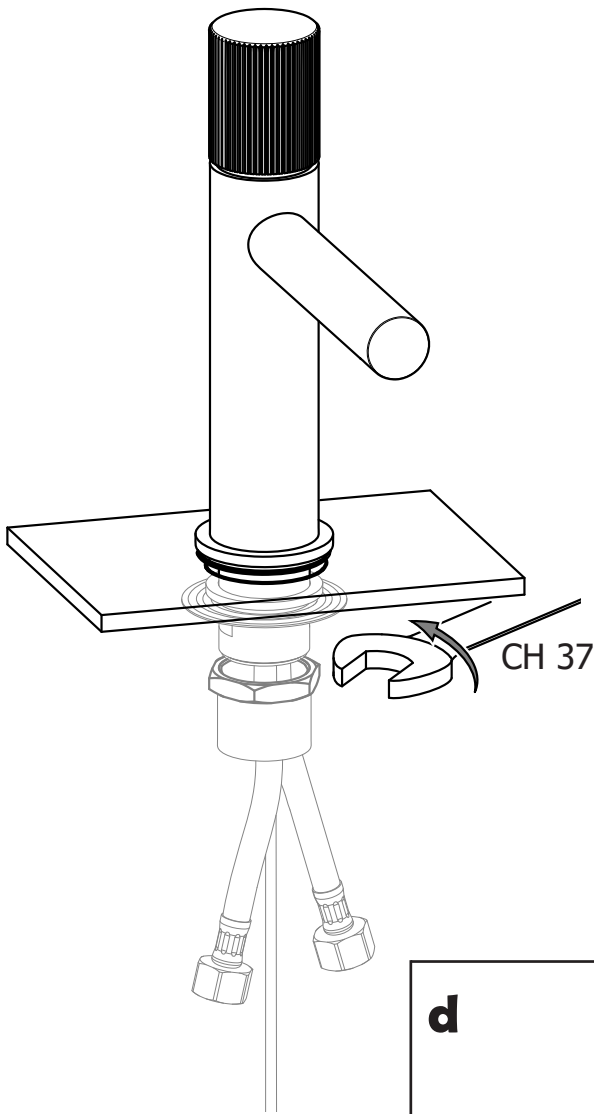


071 071K 075
081 081K 085
131 131K 135

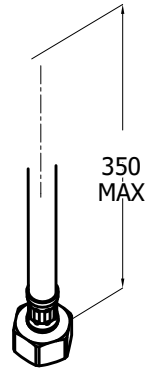


G 3/8"

d

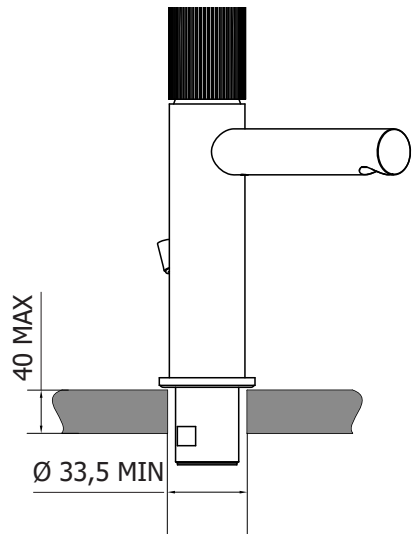


075
085
135

e

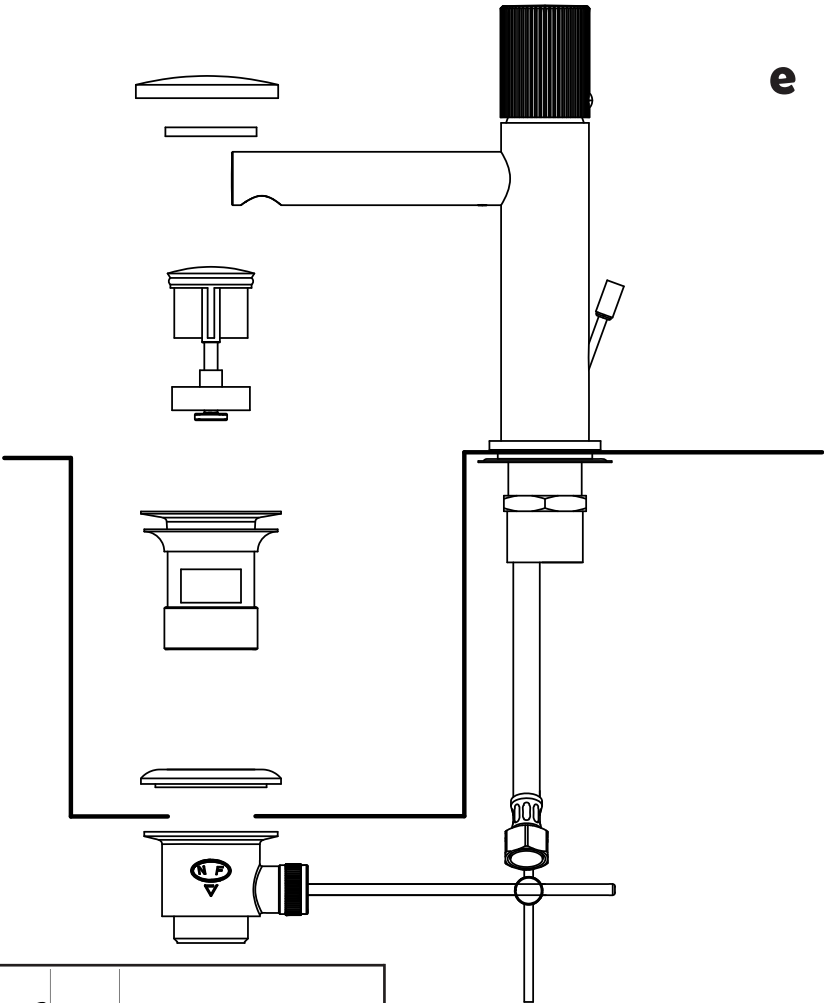


f

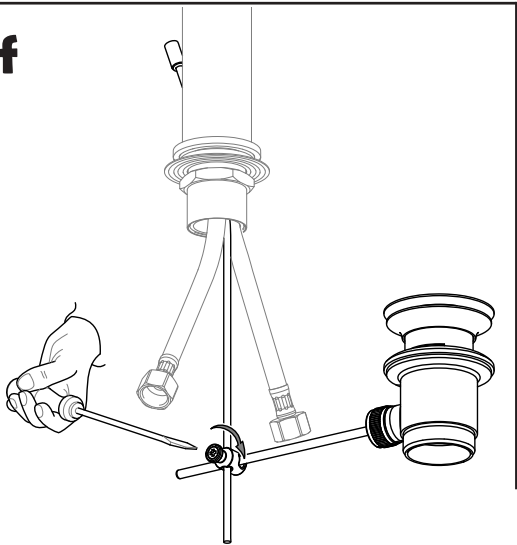

3

Fissaggio ZSCA050..
ZSCA050.. Assembly

071K..
081K..
131K..

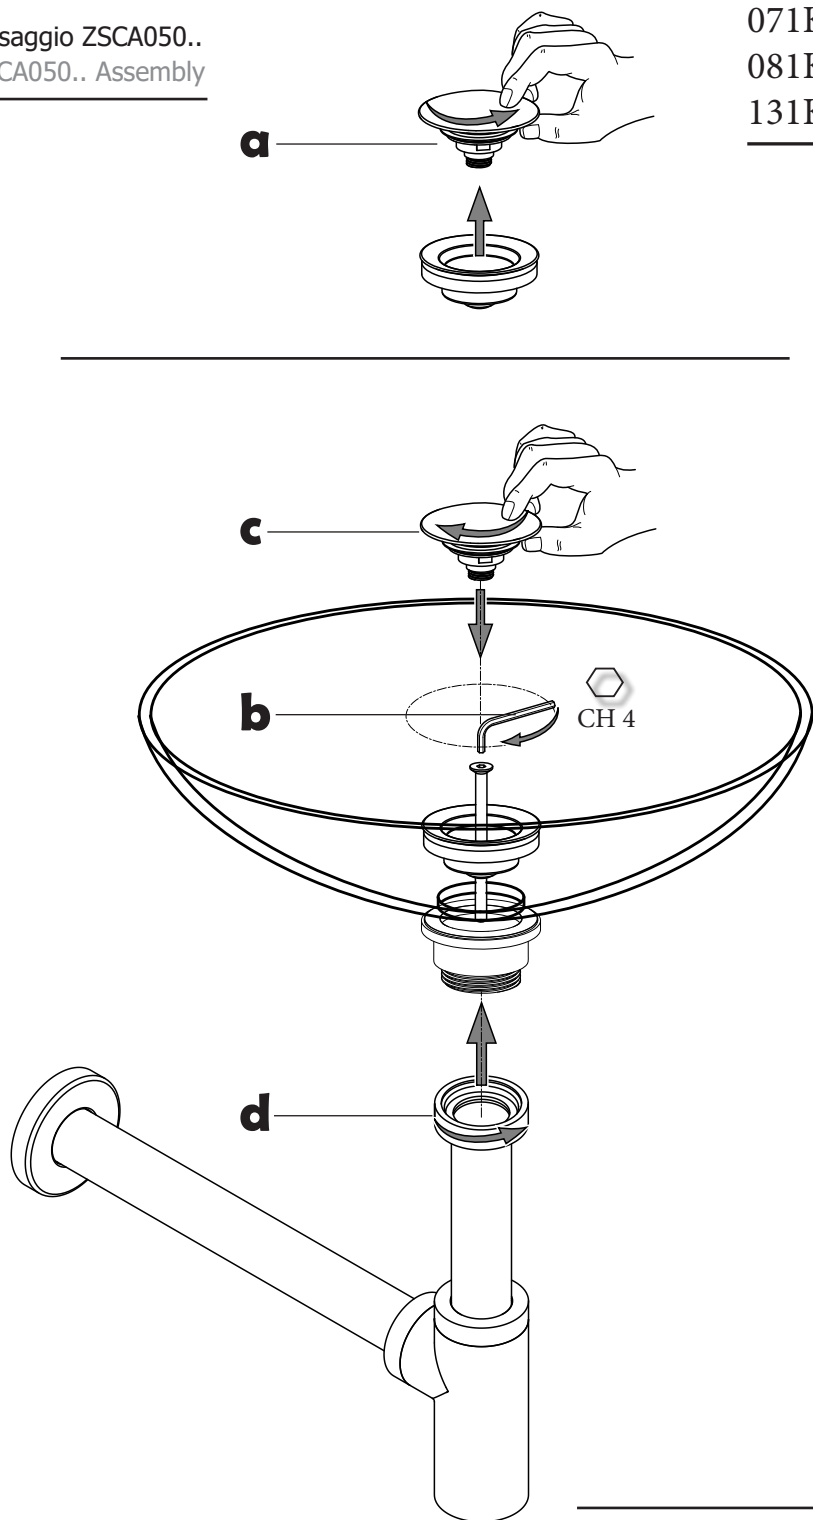



F

Funzionamento Working







085

081

081K

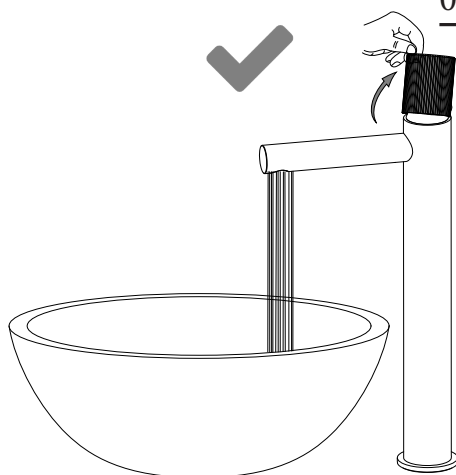
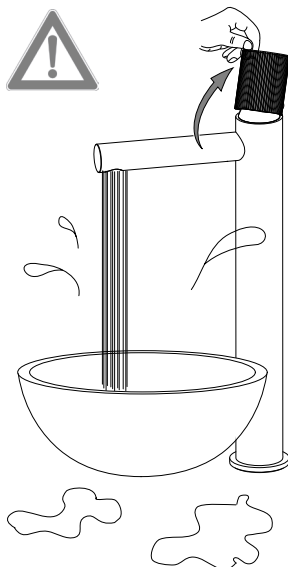
**M**

Manutenzione Service

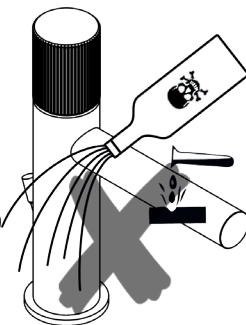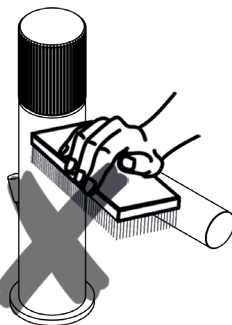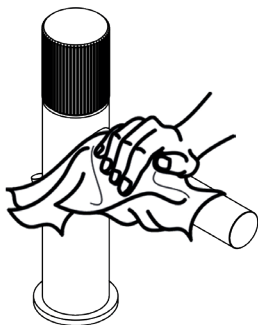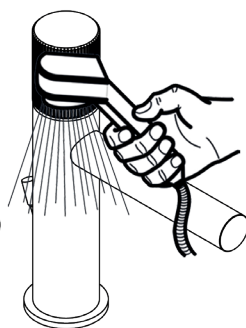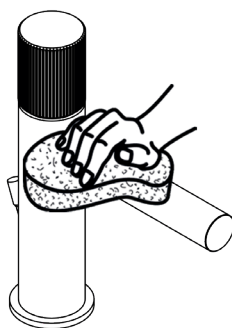
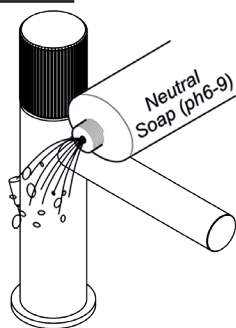


S

Sostituzione Cartuccia How to replace Cartridge

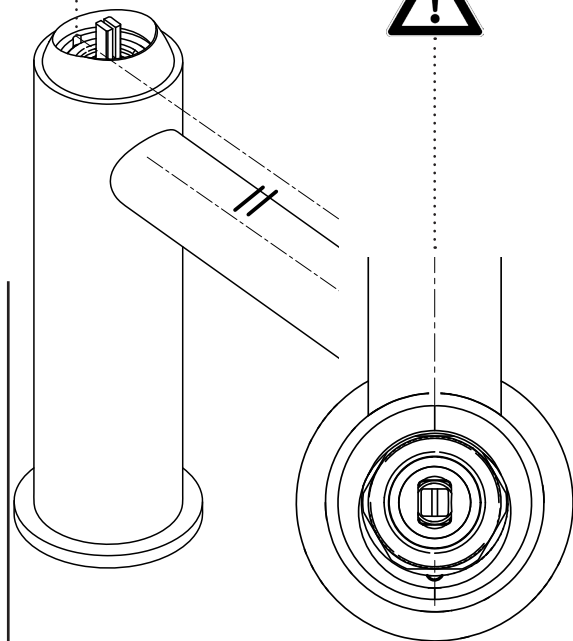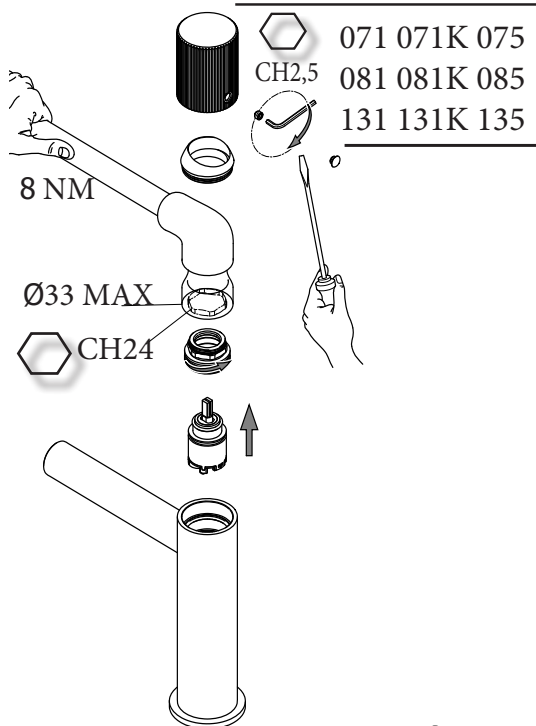a**b**

Sostituzione Aeratore How to replace Aerator

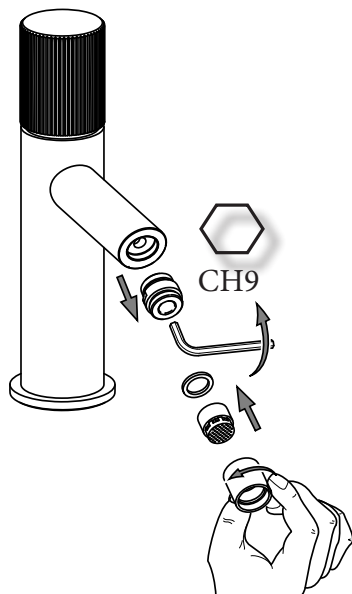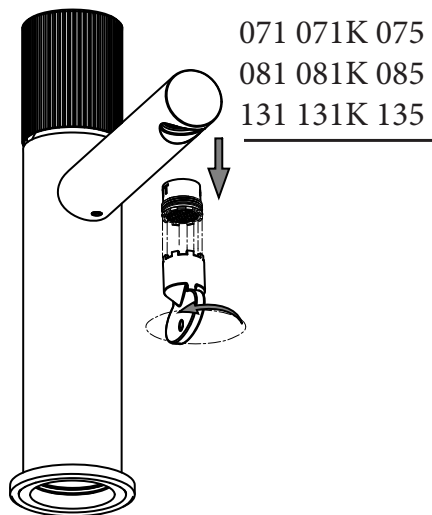**c**

Sostituzione Snodo e Aeratore How to replace Joint and Aerator

131 130 135