



LIGHT

LIG 071.. LIGX 071..
LIG 071K.. LIGX 075..
LIG 075.. LIGX 081..
LIG 081.. LIGX 085..
LIG 081K.. LIGX 131..
LIG 085.. LIGX 135..
LIG 131..
LIG 131K..
LIG 135..

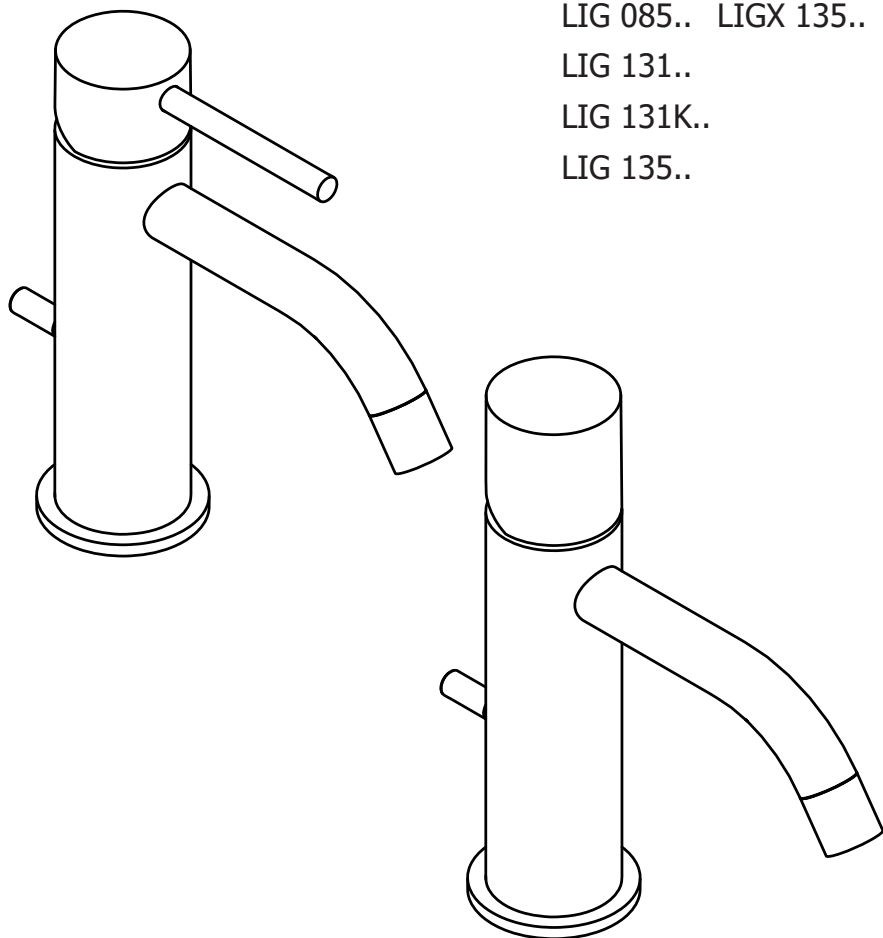

1


Montaggio Assembly

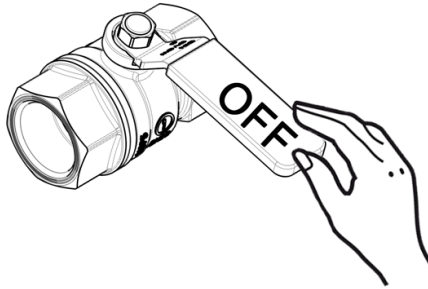

$65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$

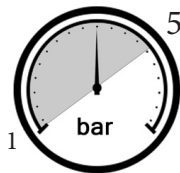


MIN - MAX




OK

2 a

071
081
131

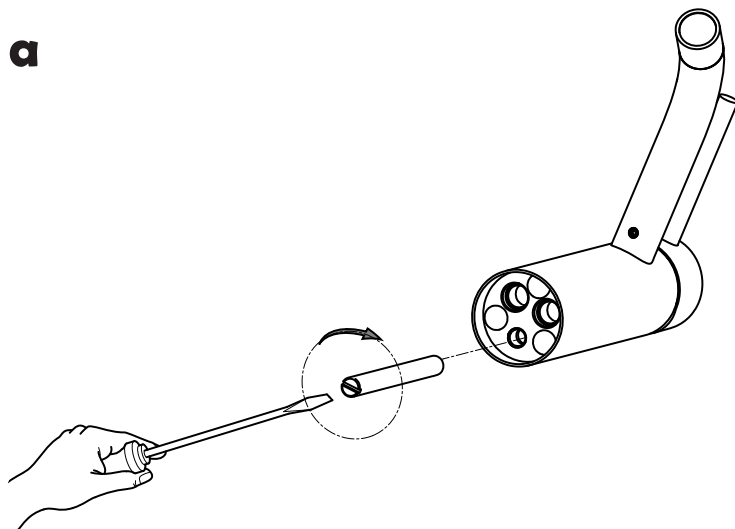



b

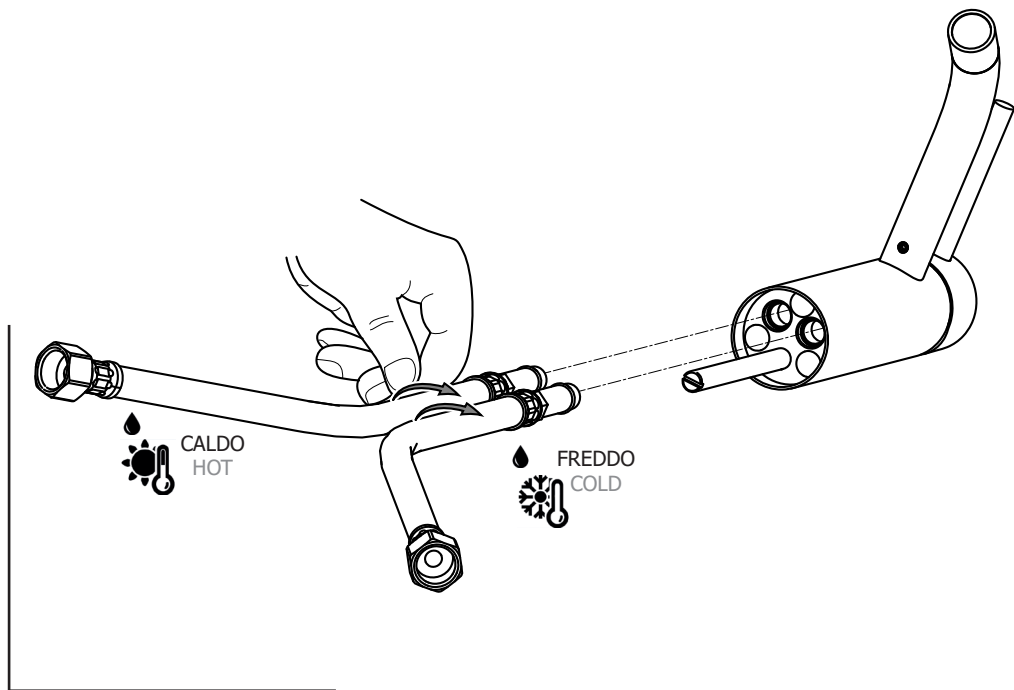

3



Fissaggio ZSCA050..
ZSCA050.. Assembly

071K..
081K..
131K..

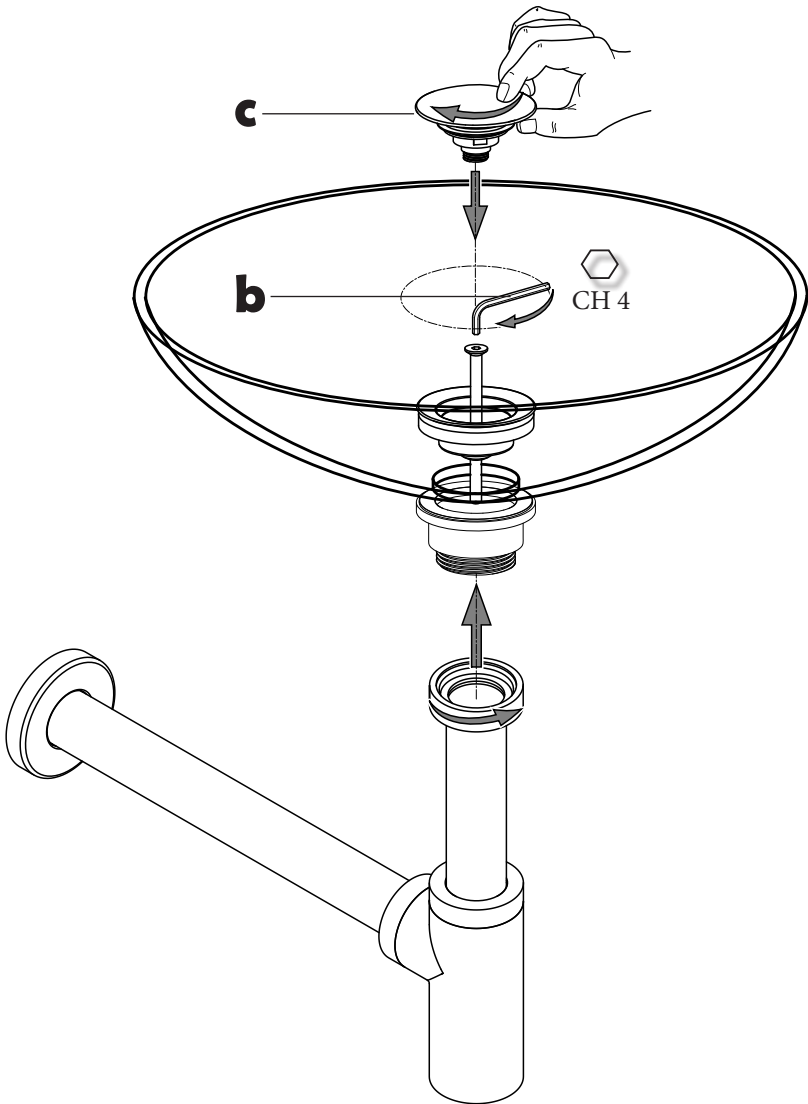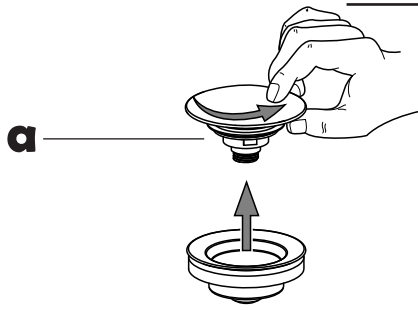

4

c

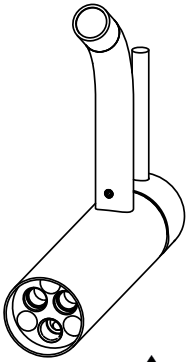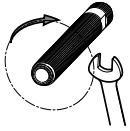


d



CALDO
HOT




FREDDO
COLD

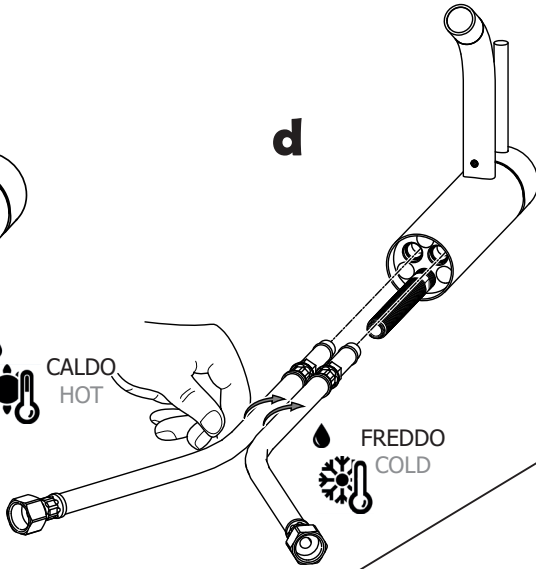

075

085

135

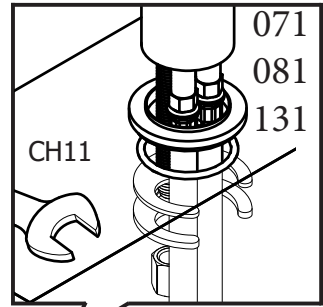

071


081

131

CH11


CH15

G 3/8"

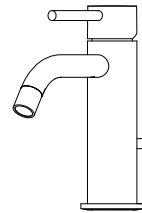


Ø 33,5


5 a

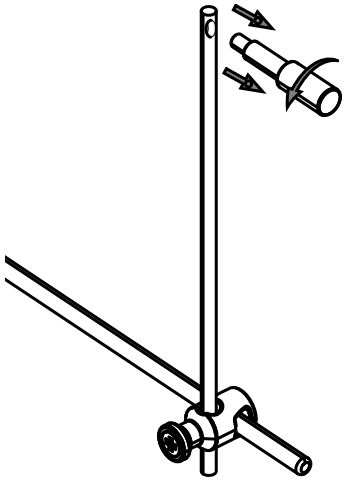

b






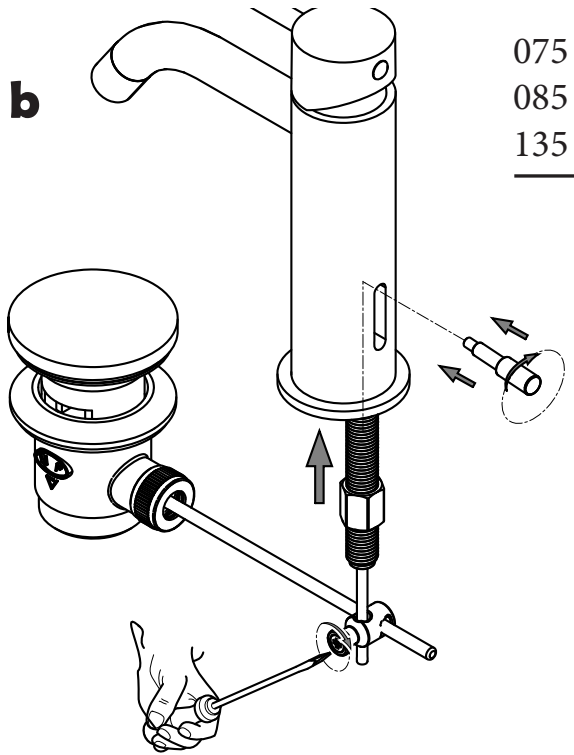


c

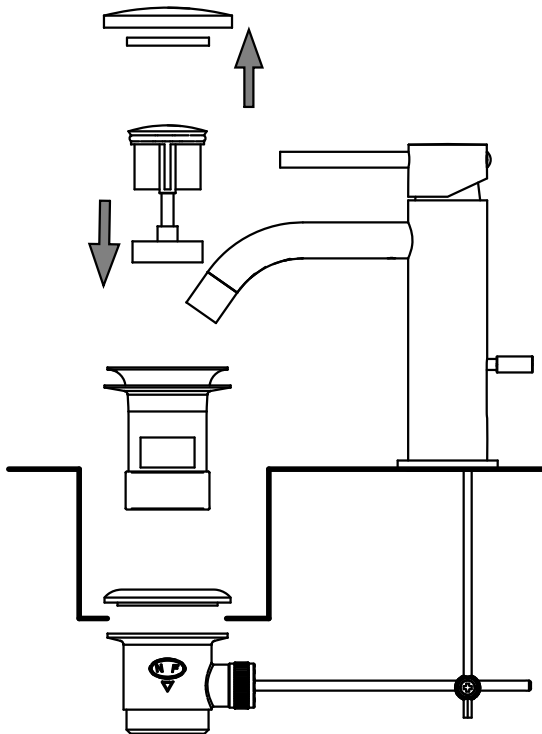

M




Manutenzione Service

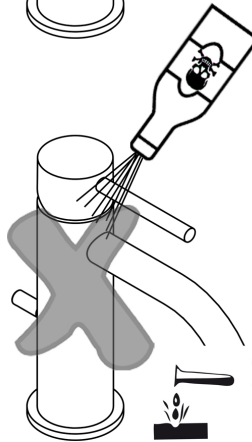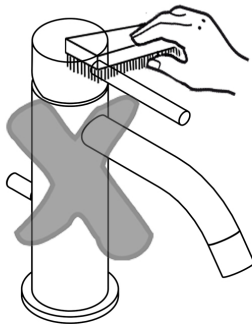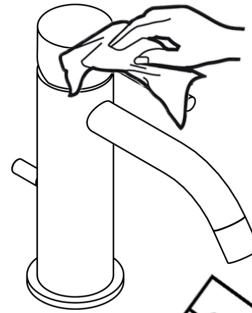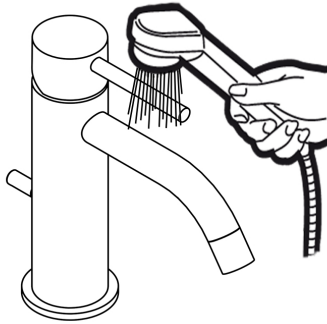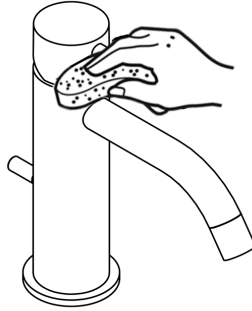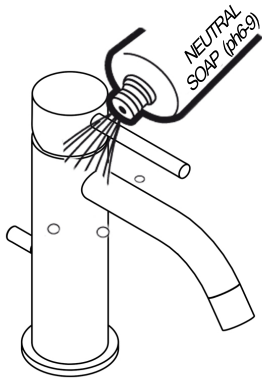

S a

Sostituzione Cartuccia
How to replace Cartridge

- 071
- 071K
- 075
- 081
- 081K
- 085
- 131
- 131K
- 135

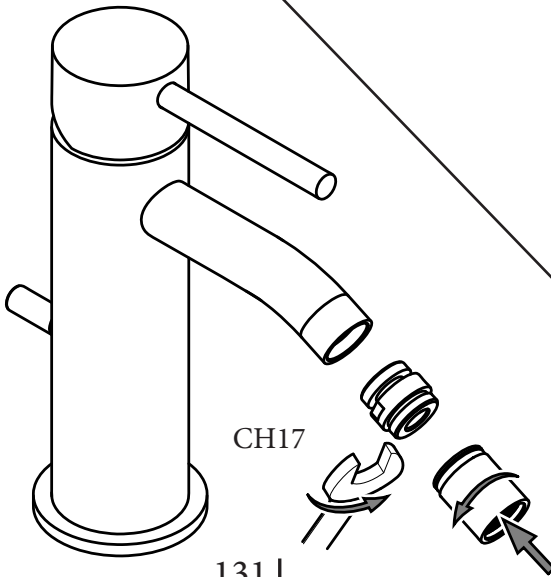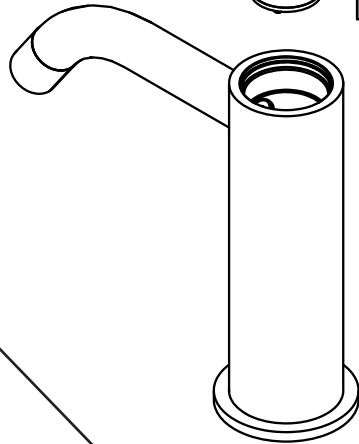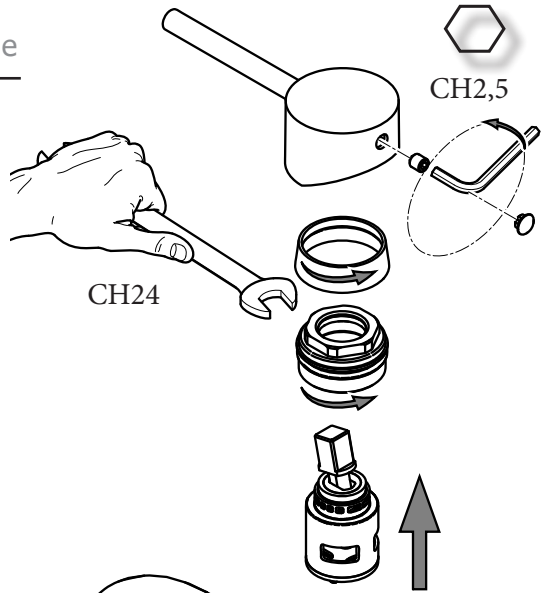

b

Sostituzione Snodo 130
How to replace Joint 135

- 131
- 130
- 135

c

Sostituzione Aeratore
How to replace Aerator