

 
- 060..
- 065..
- 070..
- 071..
- 072..
- 074..
- 075..
- 076..
- 077..
- 078..
- 120..
- 125..
- 130..
- 131..
- 135..
- 136..
- 137..
- 138..
- 180..
- 181..
- 182..
- 183..
- 184..
- 190..
- 195..

COMPATIBILITY:

QTV
 FBLV/FCMV/FMEV
 IRV/VLV
 NI
 DA
 ET

1


Montaggio Assembly

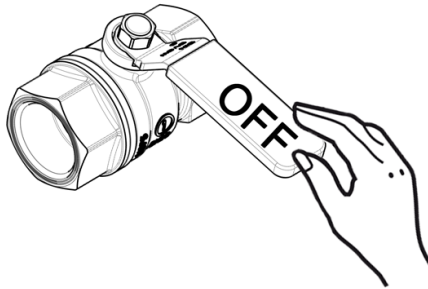


$65 \pm 5^{\circ}\text{C}$



 $15 \pm 5^{\circ}\text{C}$

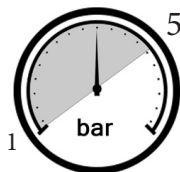


MIN - MAX

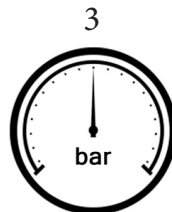 


OK

 2 a

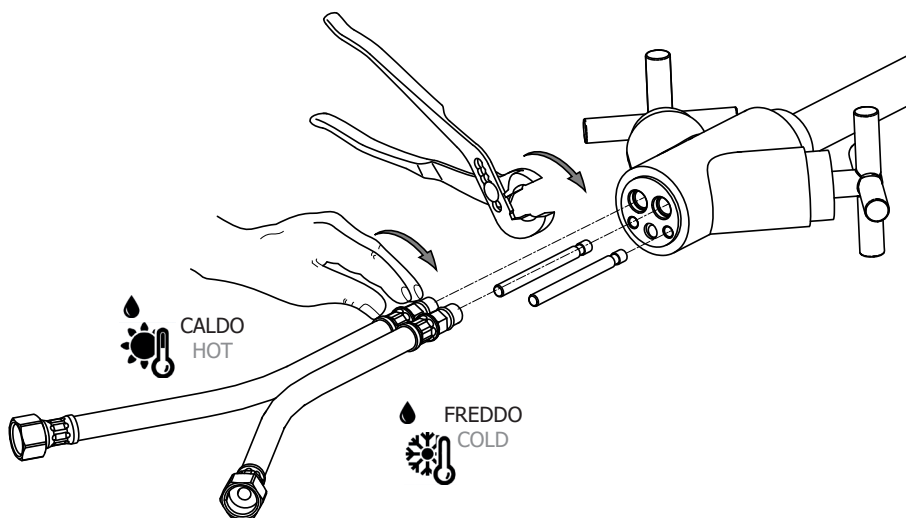


b

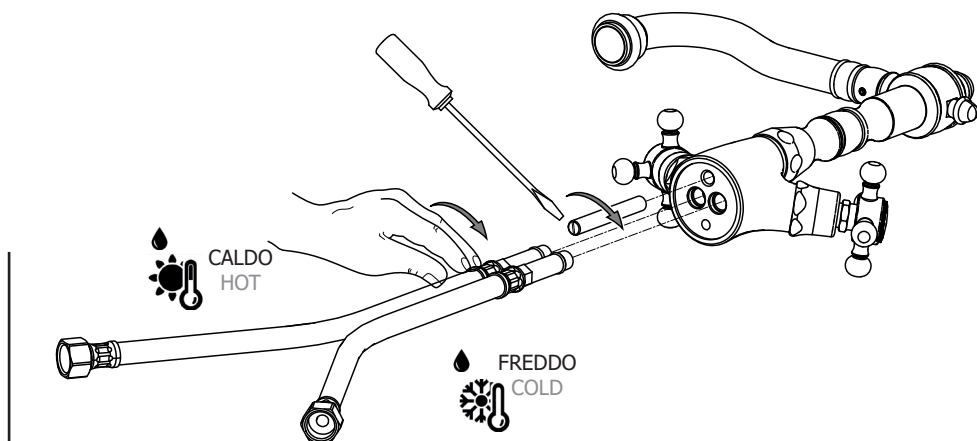 


C

 
QTV

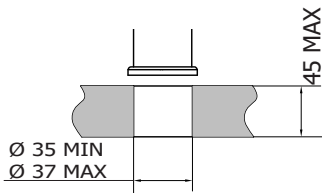


DA
ET

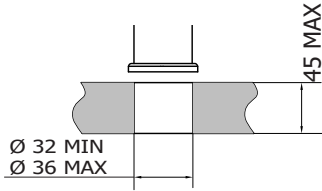 


FBLV
FCMV
FMEV

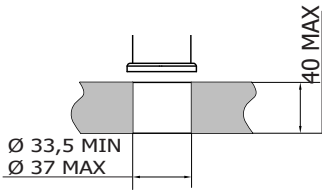 


IRV
VLV

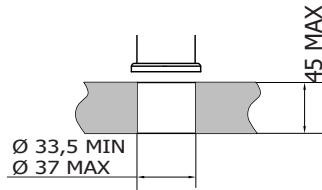 




NI

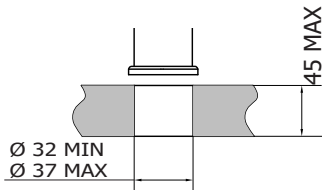 


NI
072
074
076
078
180
182

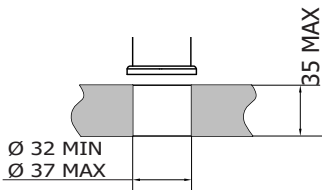 

3


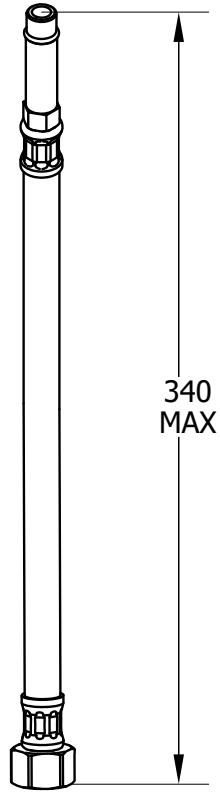 
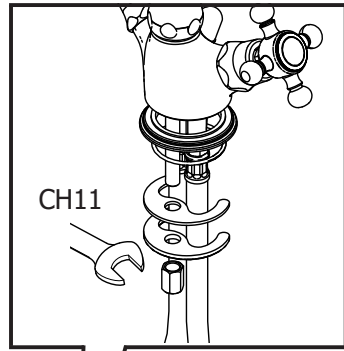 
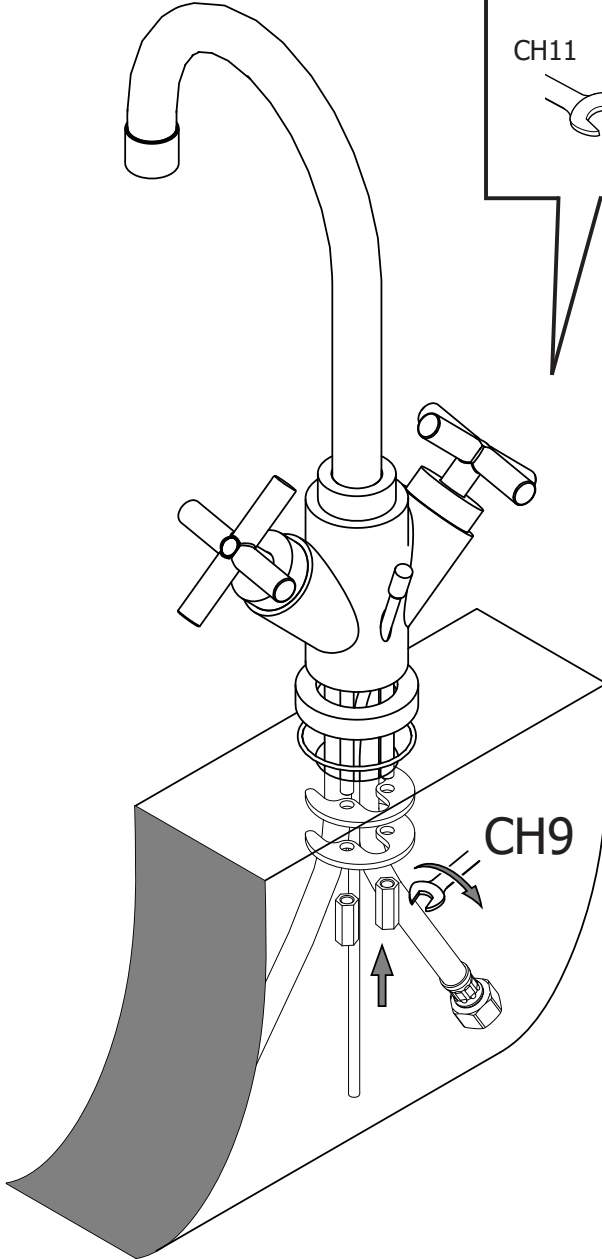 



 
Attacco Lavastoviglie
Dish Washer Machine Connection

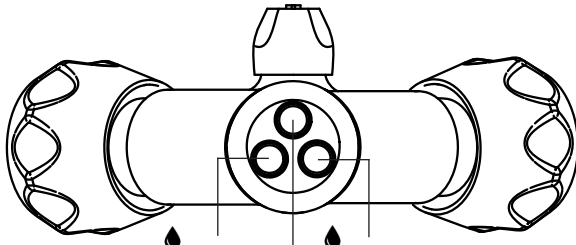


CALDO
HOT

      FREDDO
COLD

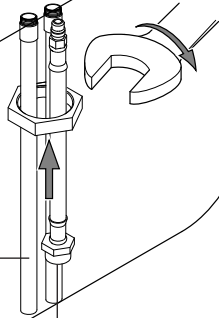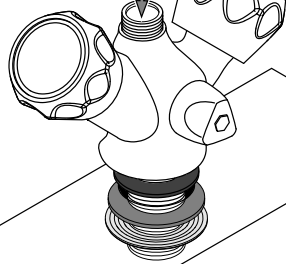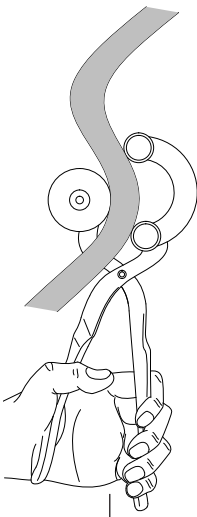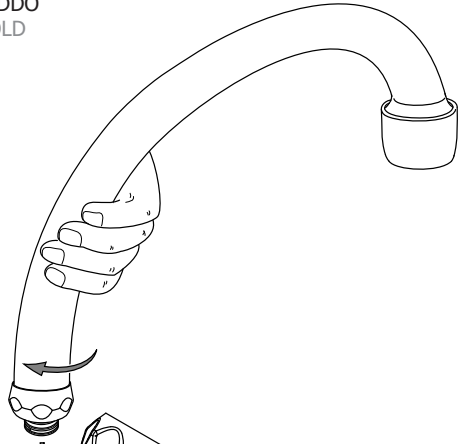


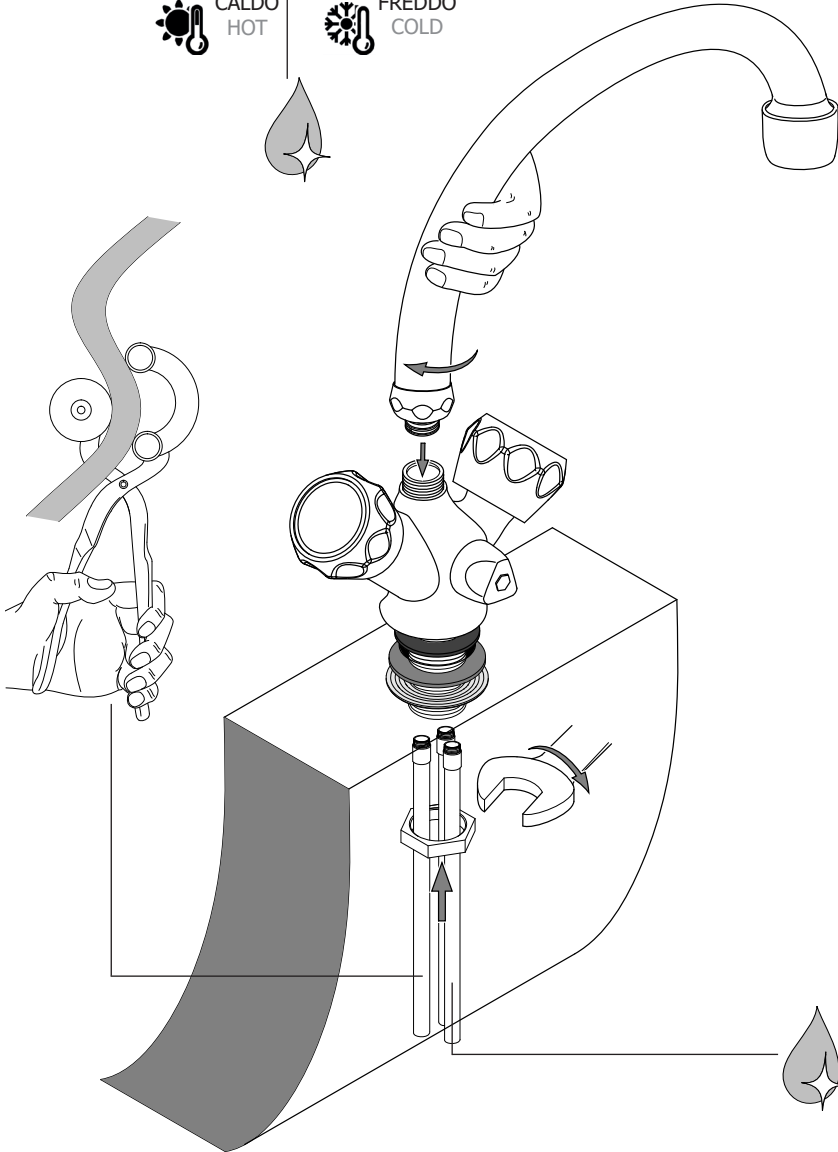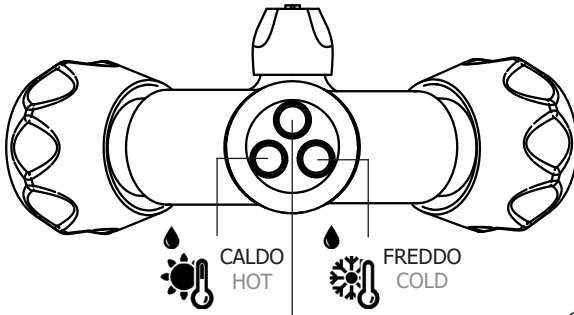


4 a

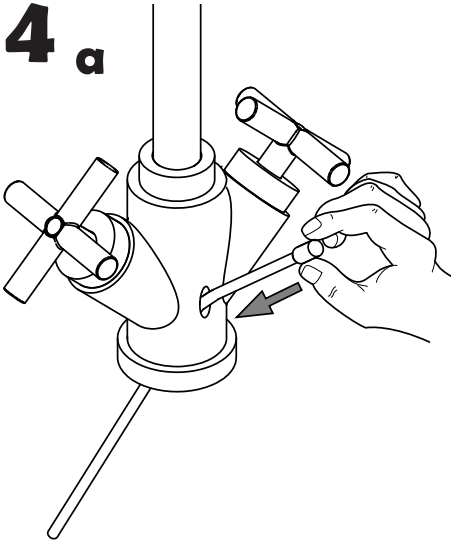 

b






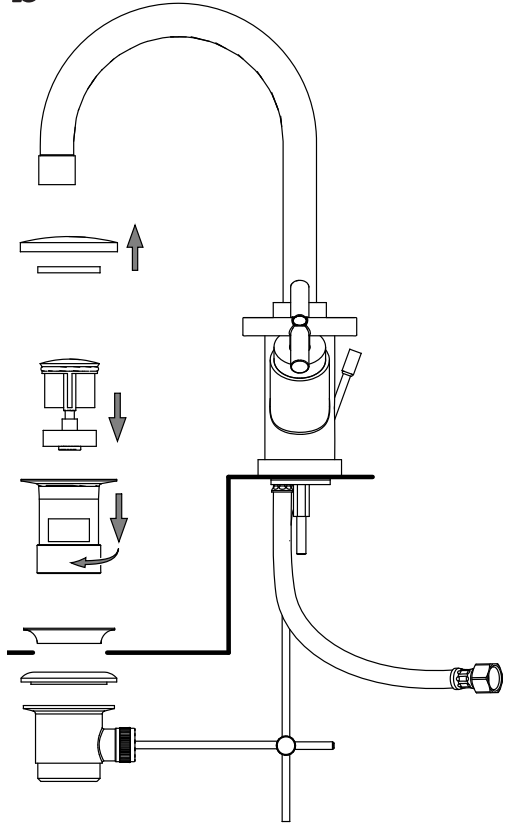 


c

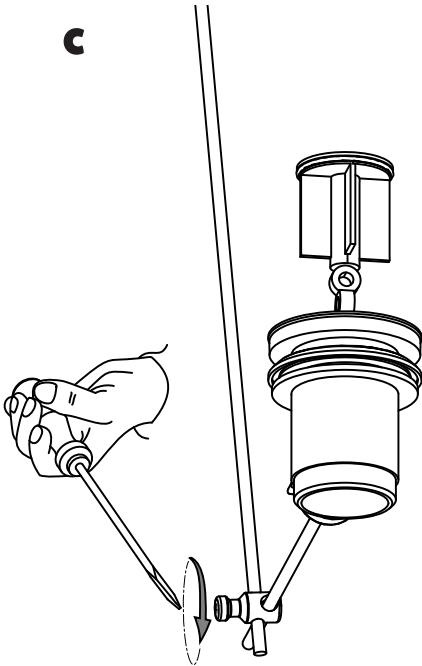 



M

      Manutenzione Service

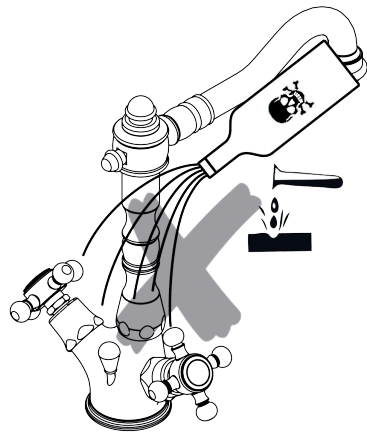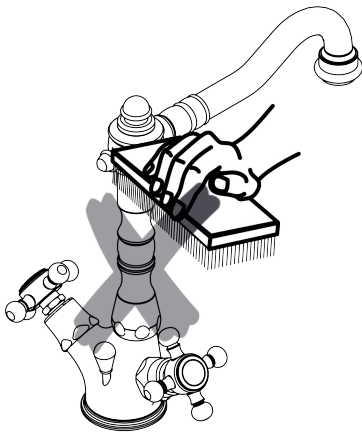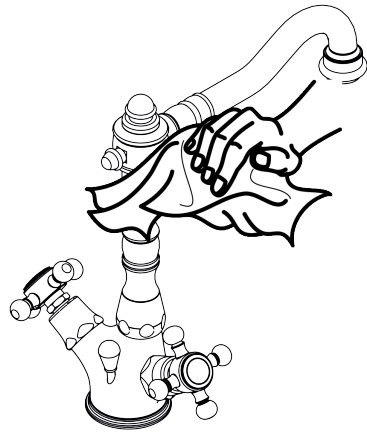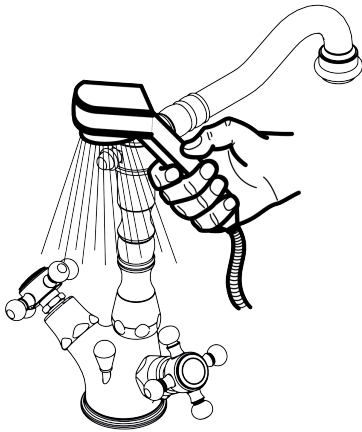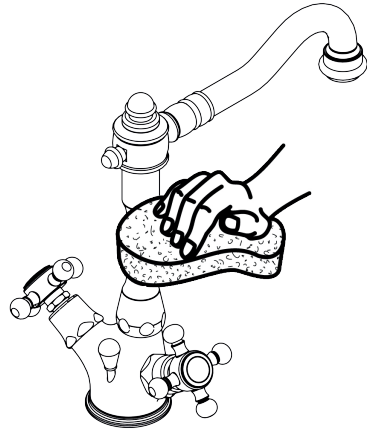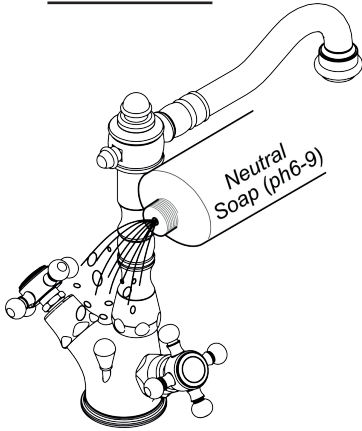

S a

  Sostituzione Vitone How to Ceramic Disk Valve

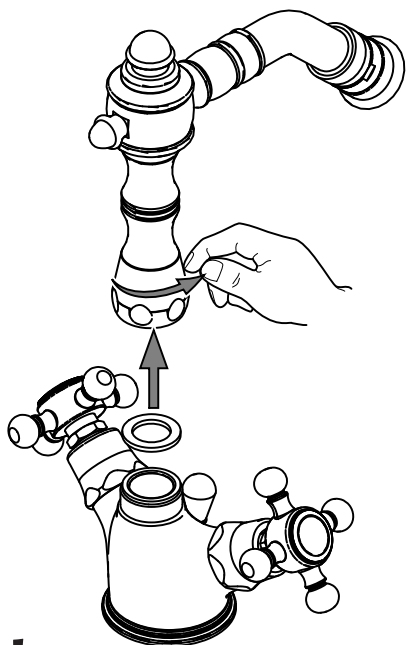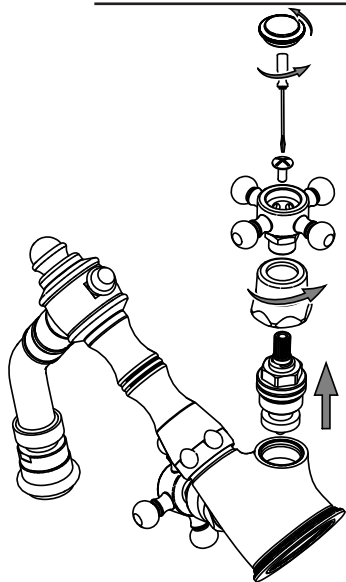

d

 
 
Sostituzione Canna How to replace Spout

b

Sostituzione Snodo How to replace Joint

c

Sostituzione Aeratore How to replace Aerator

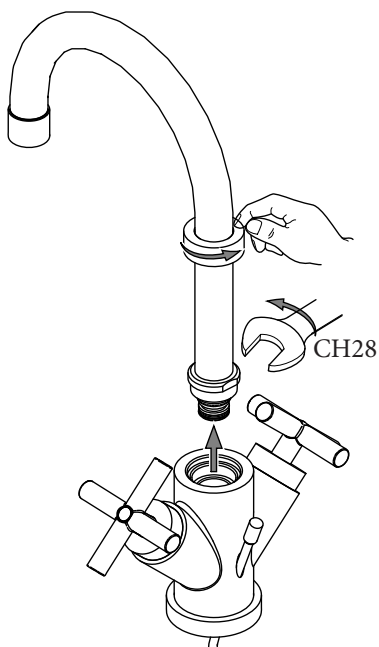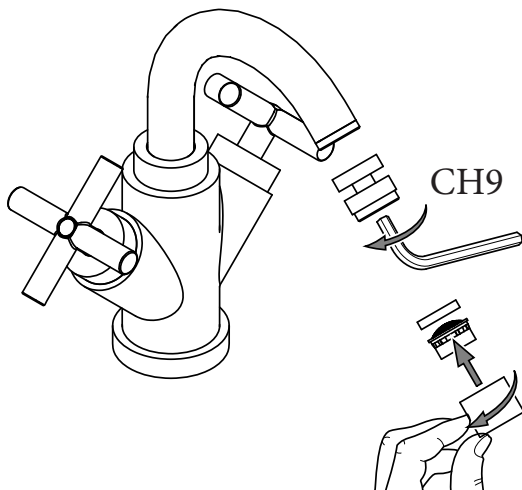

e

QTV

f

