

# Ringo West

075..ES

071..ES

075..

071..

073..


074..

085..

081..


135..

131..

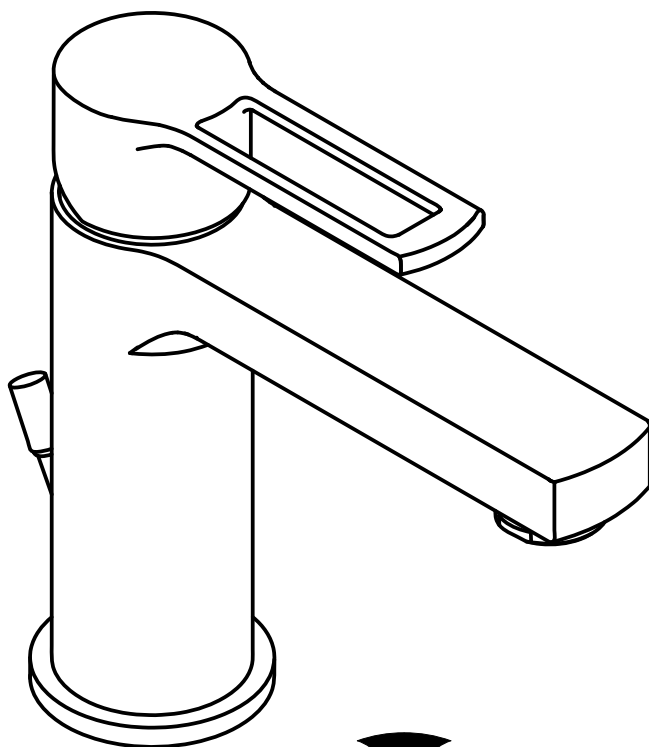

# 1


## Montaggio Assembly

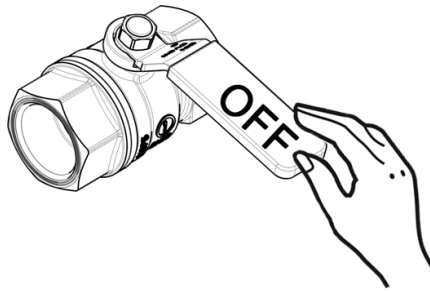


$65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$

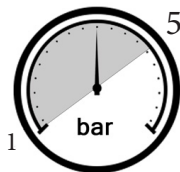


MIN - MAX

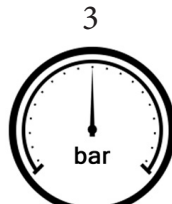

OK


# 2

## a

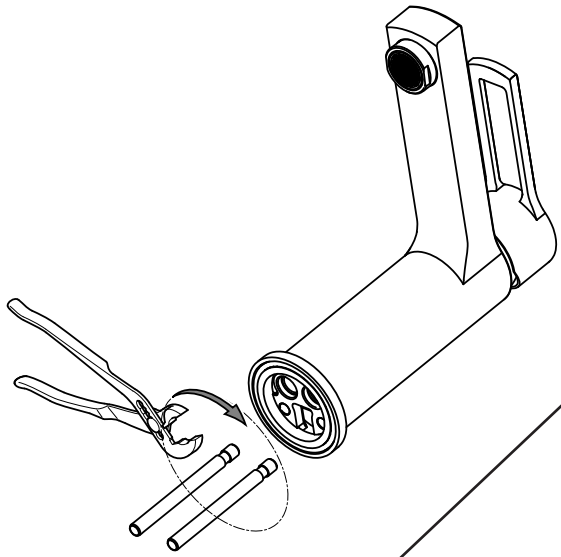


075ES 071ES  
071 070 075  
072 073 074  
081 080 085  
131 130 135

## b

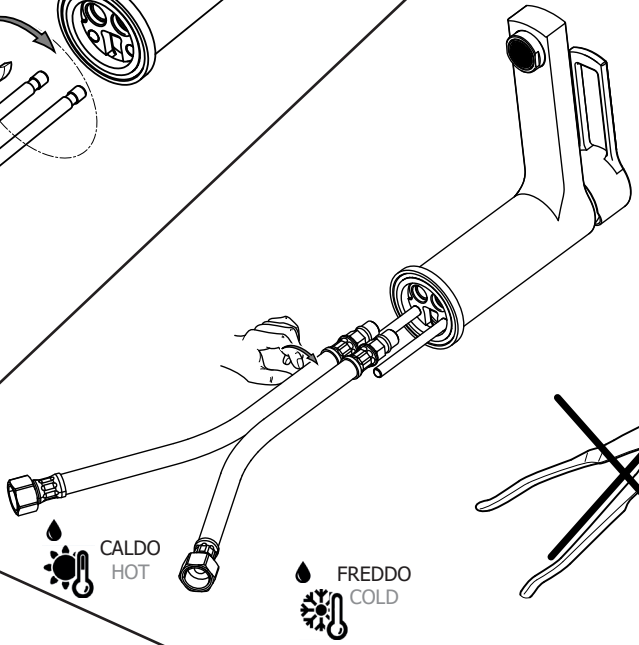


## c

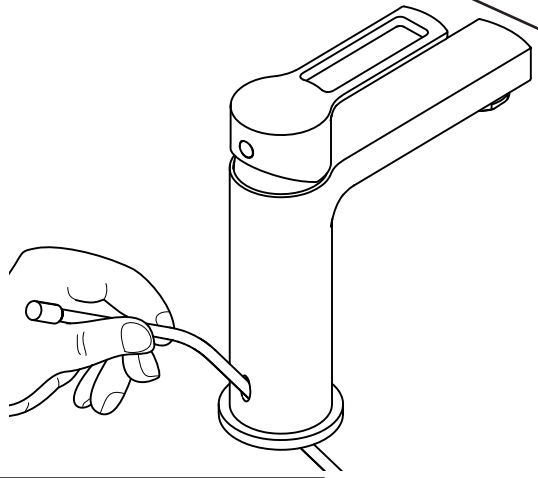


075ES  
070 075  
072 073  
080 085  
130 135

**d**

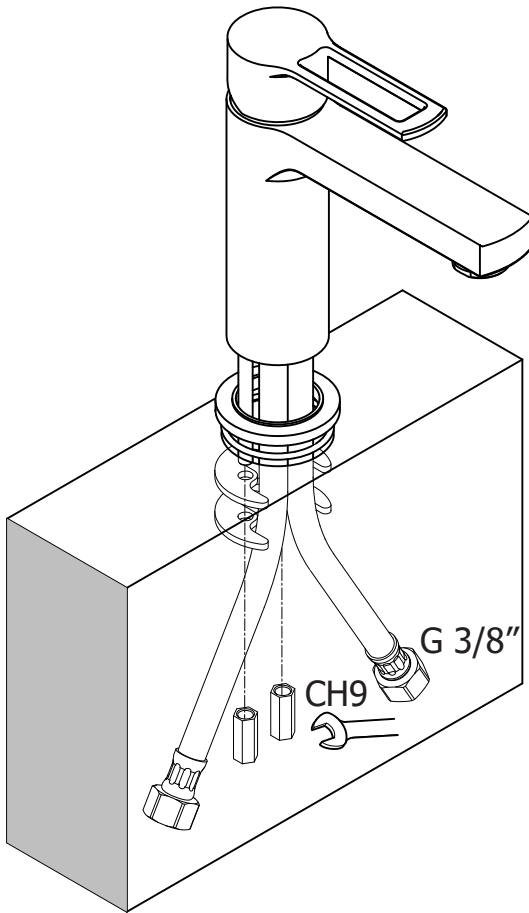

075ES 071ES  
071 070 075  
072 073 074  
081 080 085  
131 130 135

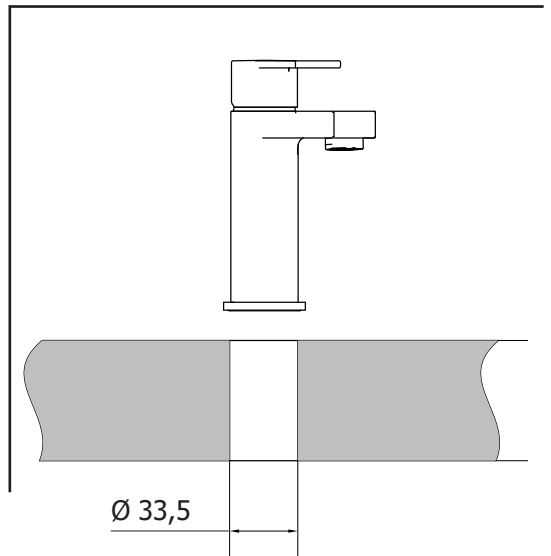

075ES



070 075

072 073

080 085

130 135




e

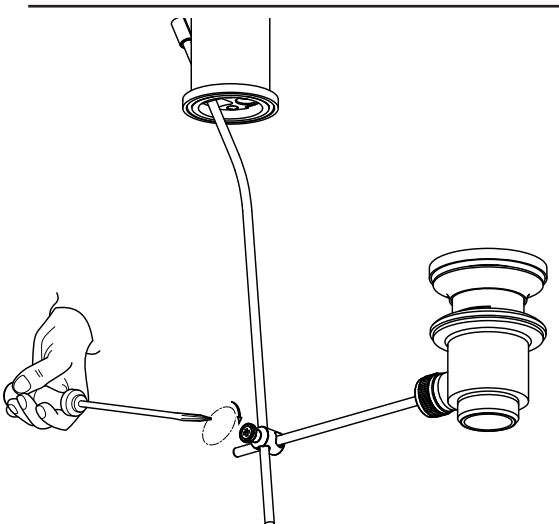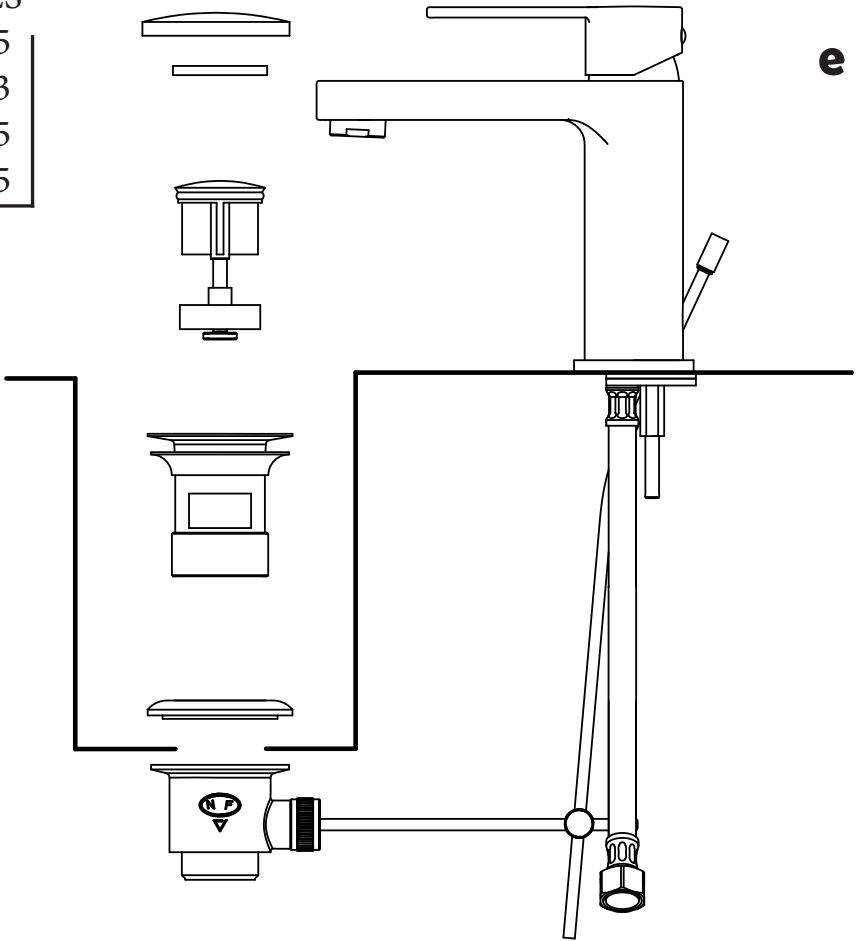

# F



## Funzionamento Working

075 ES  
071 ES

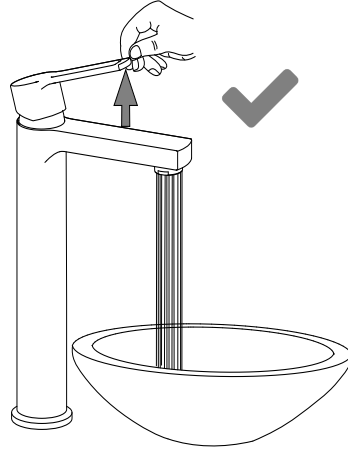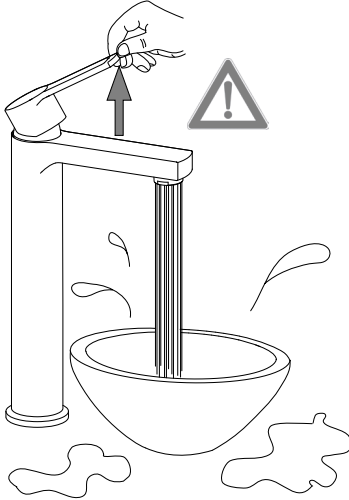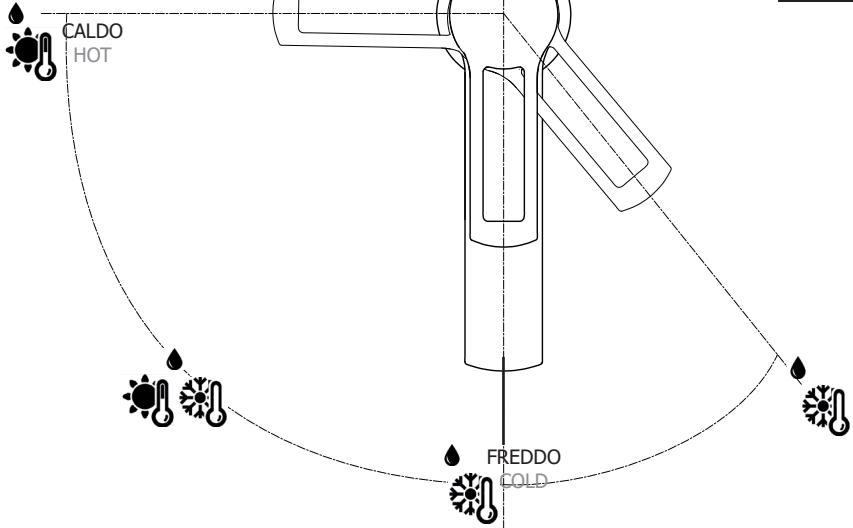

# M

## Manutenzione Service

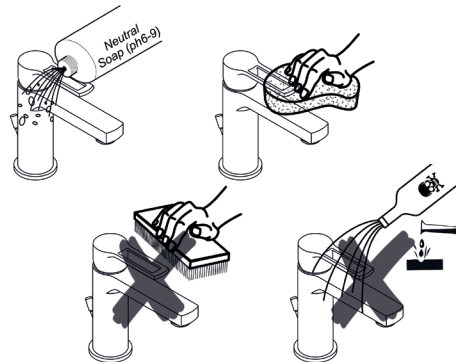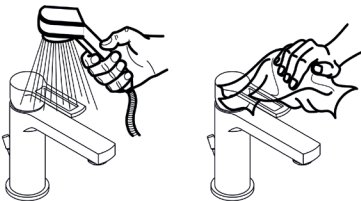


ZSCA050..

**d**


071K..

081K..


131K..

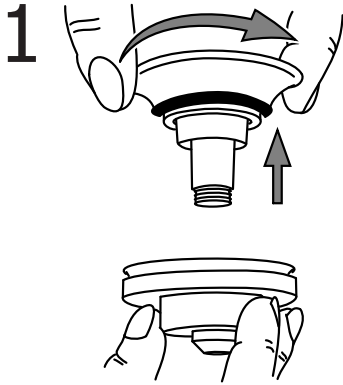

2

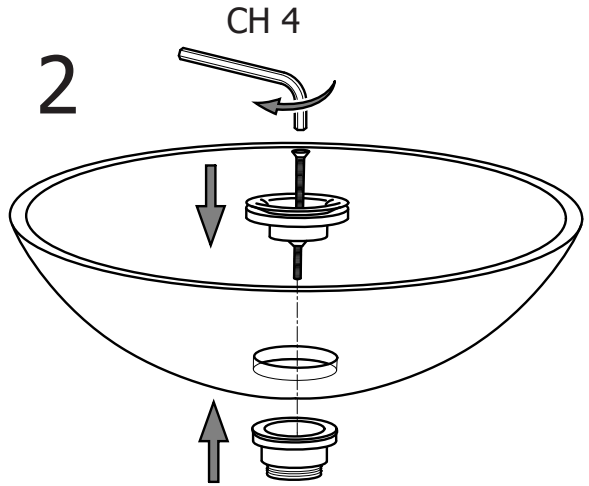


3

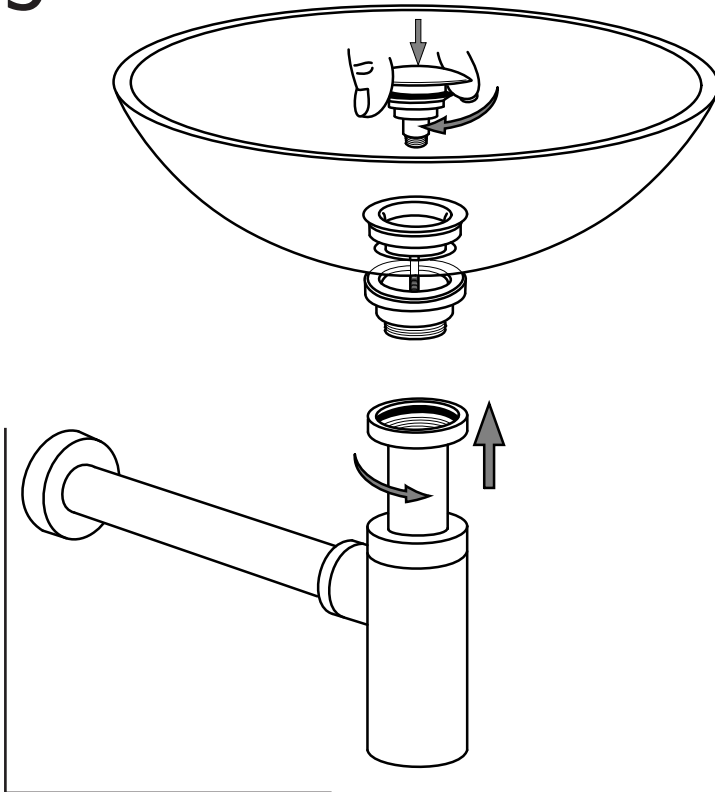


**S** Sostituzione Cartuccia  
How to replace Cartridge

075ES 071ES  
071 070 075  
081 080 085  
131 130 135

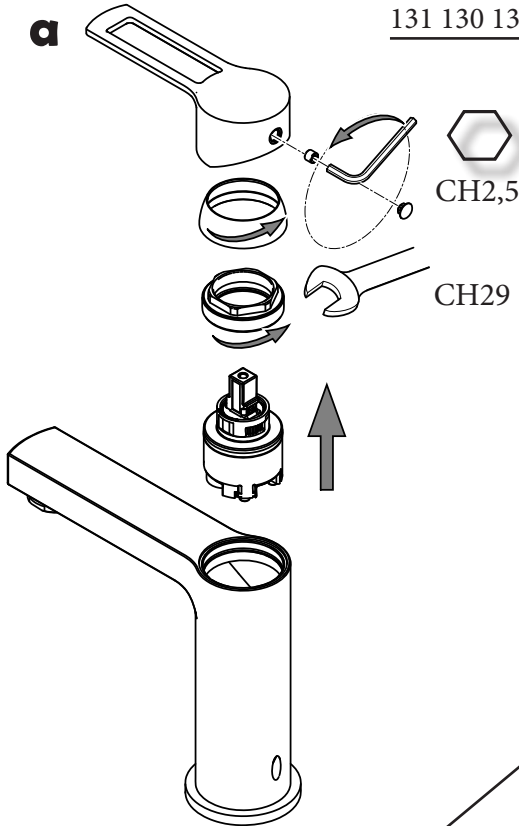

075ES 071ES  
071 070 075  
081 080 085  
131 130 135

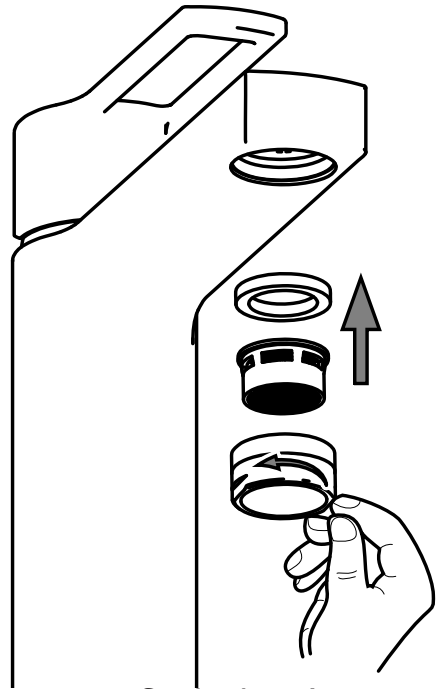

Sostituzione Aeratore  
How to replace Aerator

**c**  
Sostituzione Snodo  
How to replace Joint

131 130 135

