

RINGO / WEST

RIN022.. / WS022..

RIN023.. / WS023..

RIN024.. / WS024..


RIN026.. / WS026..

RIN161.. / WS161..

RIN168.. / WS168..


RIN168D.. / WS168D..

RIN168R.. / WS168R..

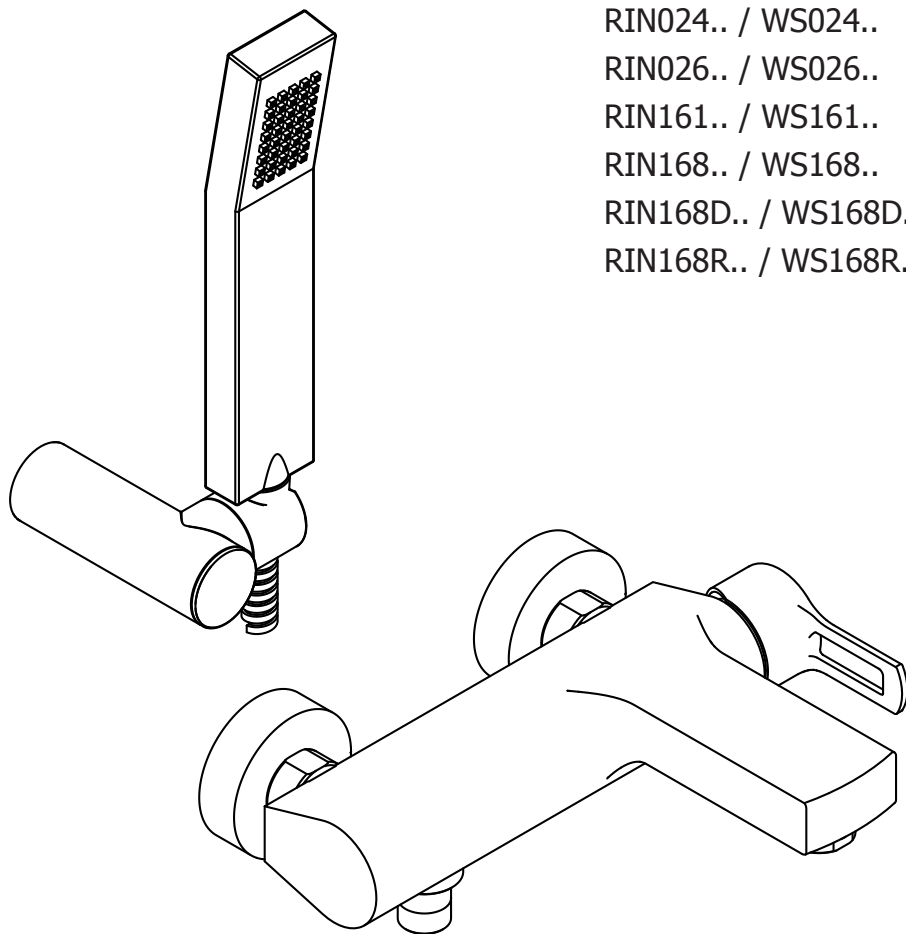

Montaggio
Assembly


1

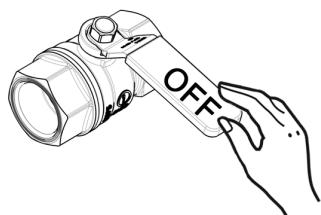

$65 \pm 5^\circ\text{C}$



$15 \pm 5^\circ\text{C}$

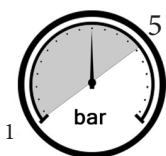


MIN - MAX



OK



2

161	022
168	023
168D	024
169R	026

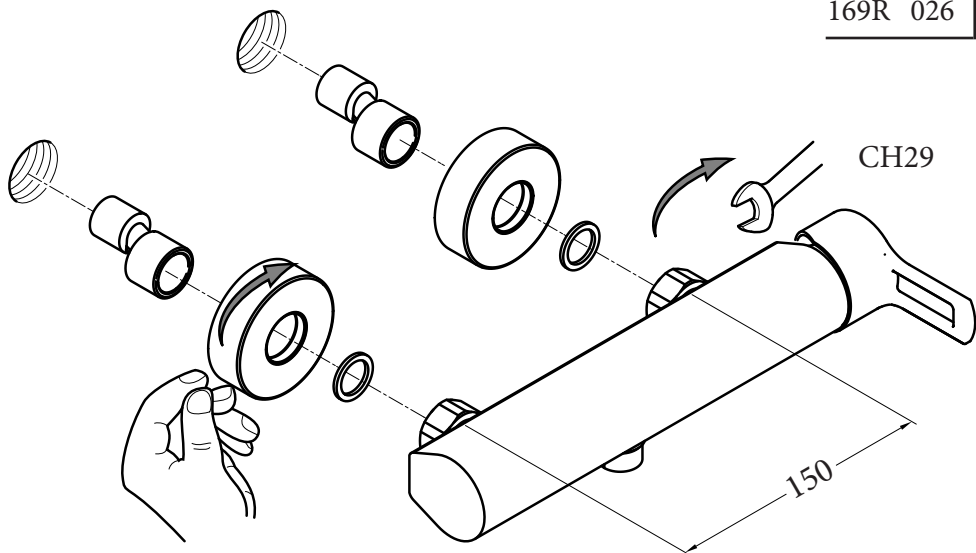

3

161






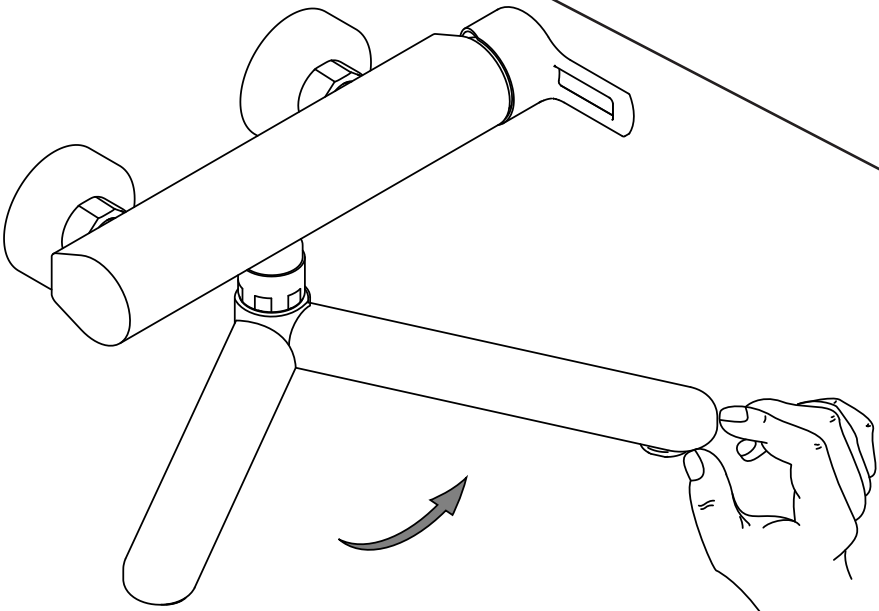
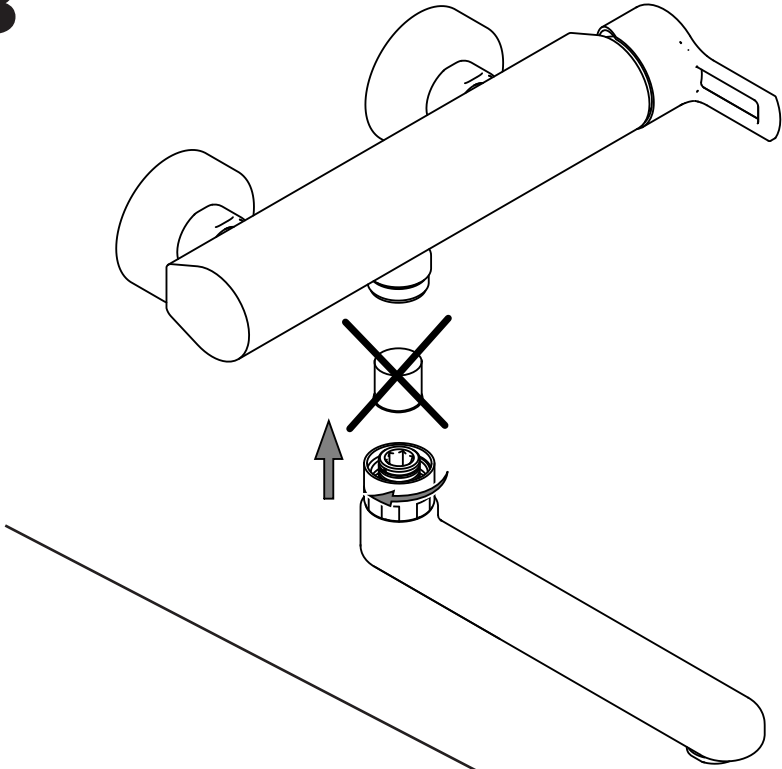


4

168D
023
024




023
024
168D


026

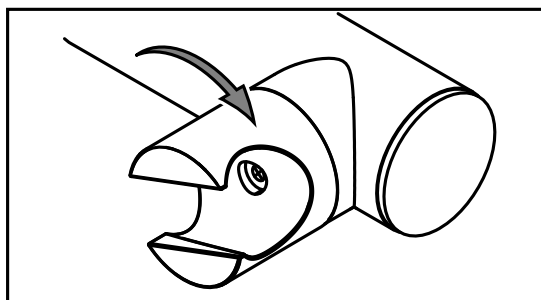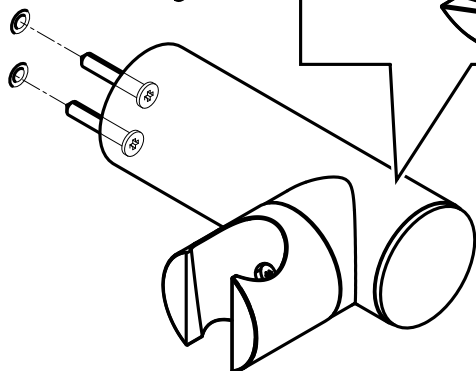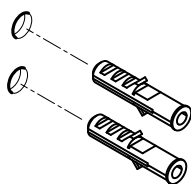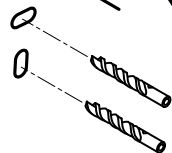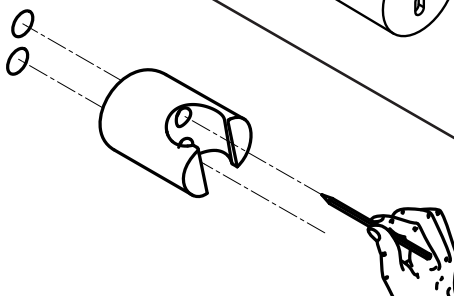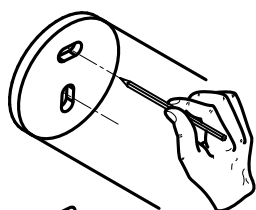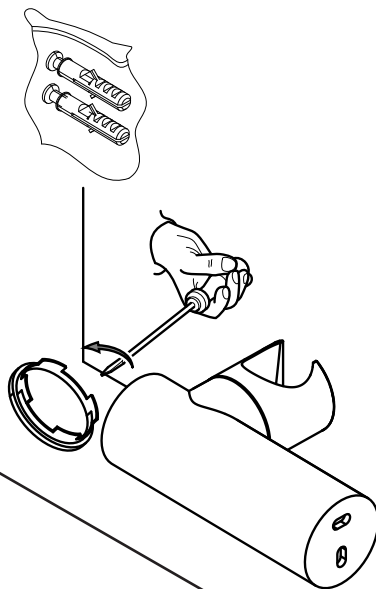

Deviatore
Diverter







- 022
- 023
- 024
- 026

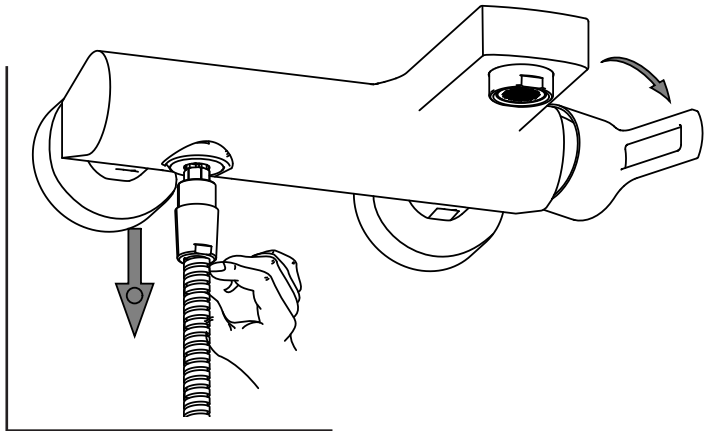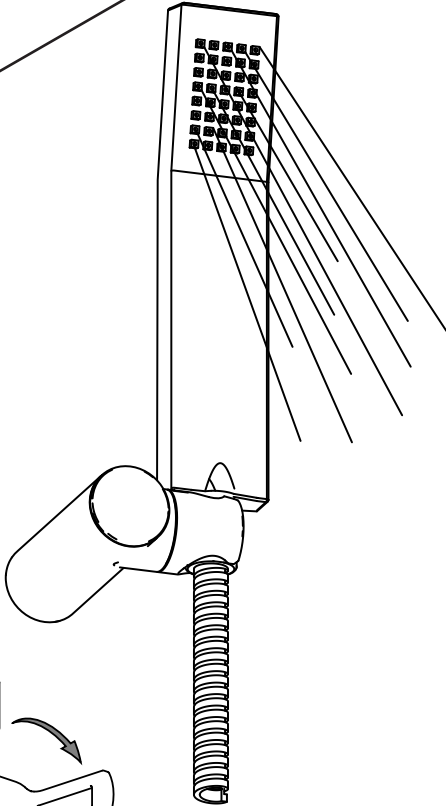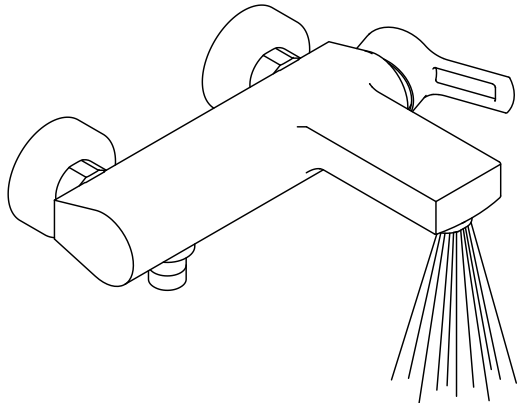

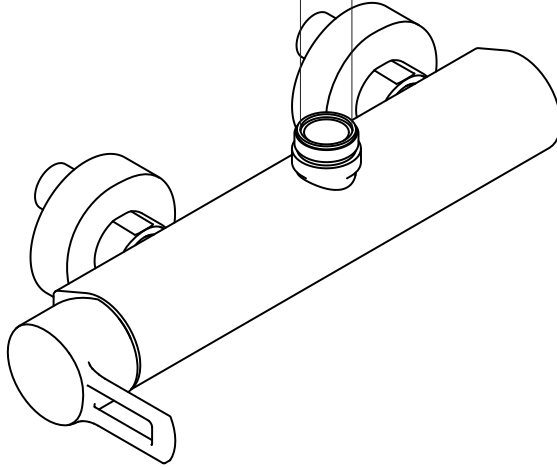

M

Manutenzione Service

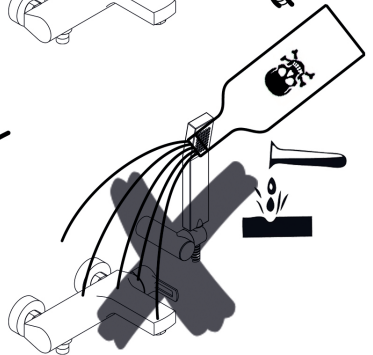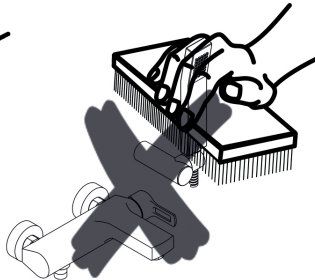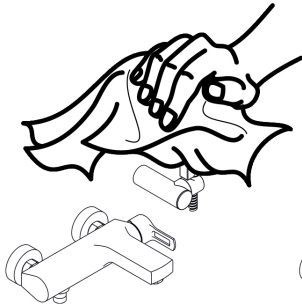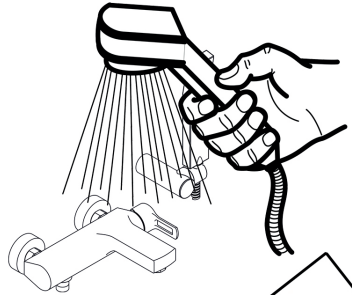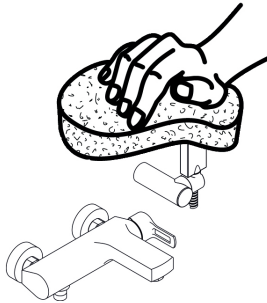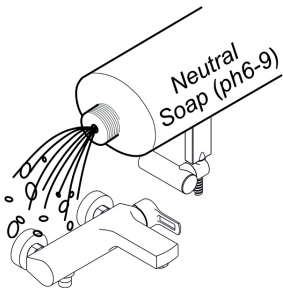




Sostituzione Cartuccia
How to replace Cartridge

161	022
168	023
168D	024
169R	026


a

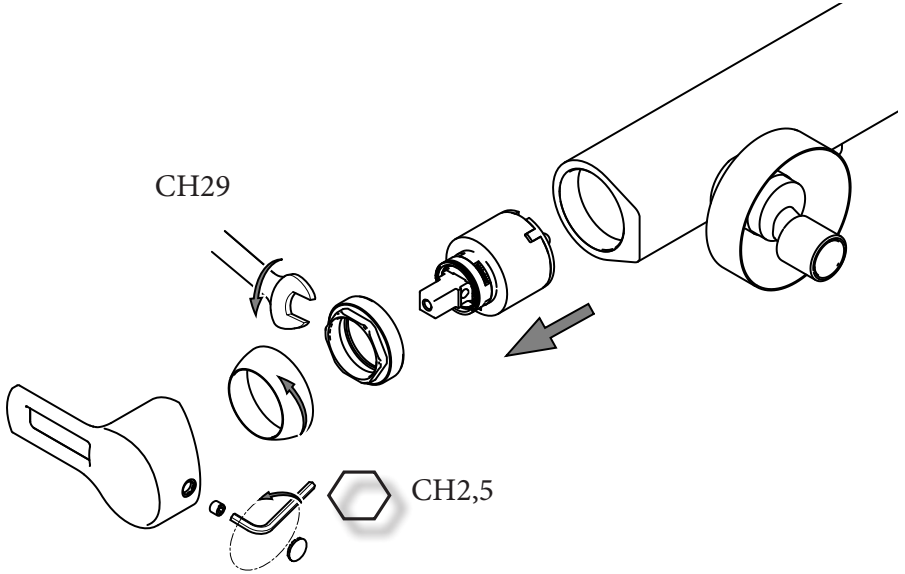


b

Sostituzione Sede Calotta
How to replace Seat for Nut

161	022
168	023
168D	024
169R	026

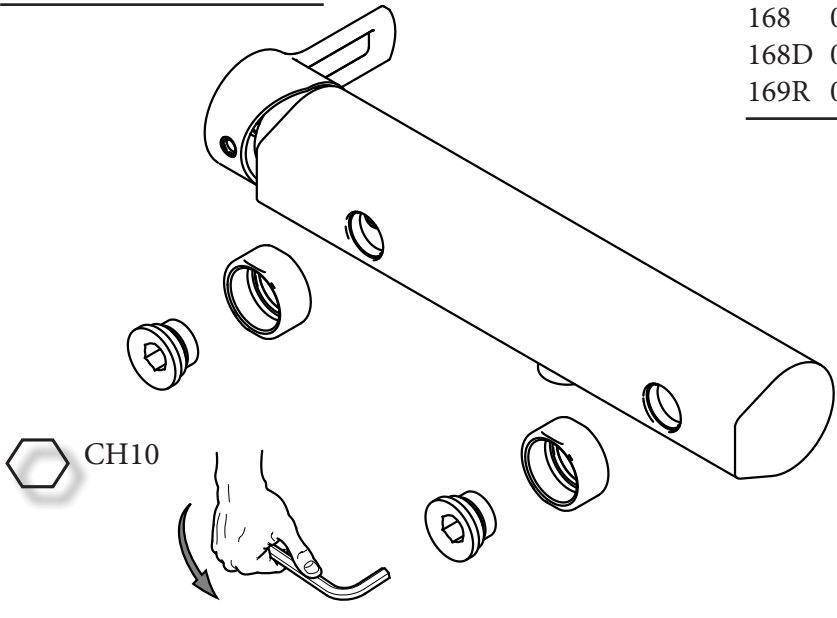

c Sostituzione Deviatore
How to replace Diverter

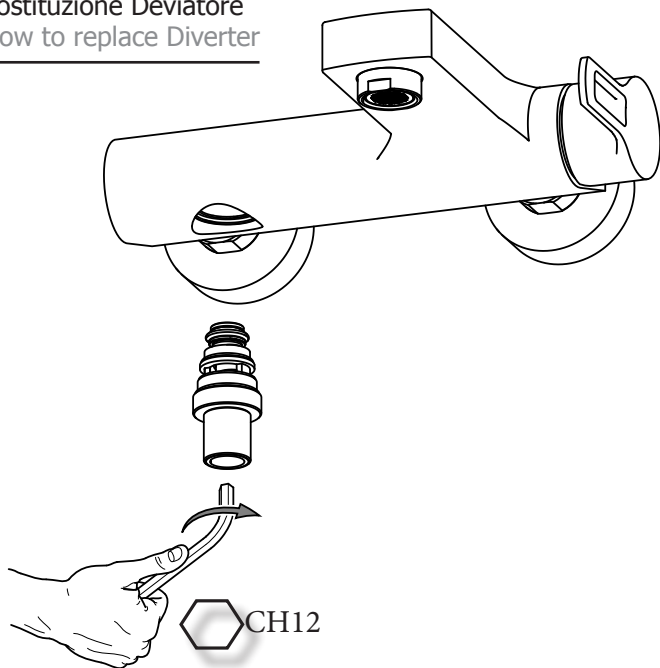


022

023

024

026

d Sostituzione Aeratore
How to replace Aerator

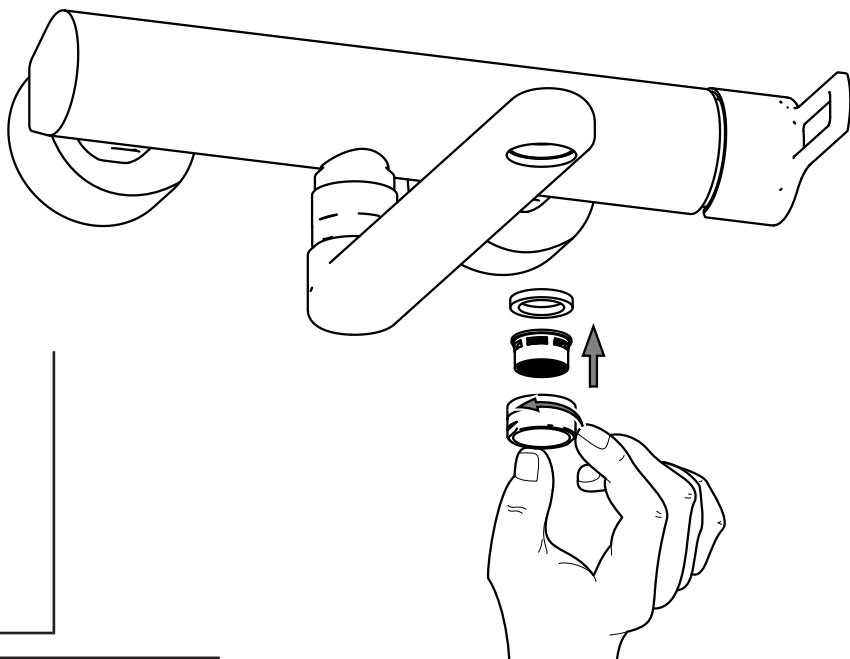

161

022

023

024

026